

FIG. 1

FIG. 2

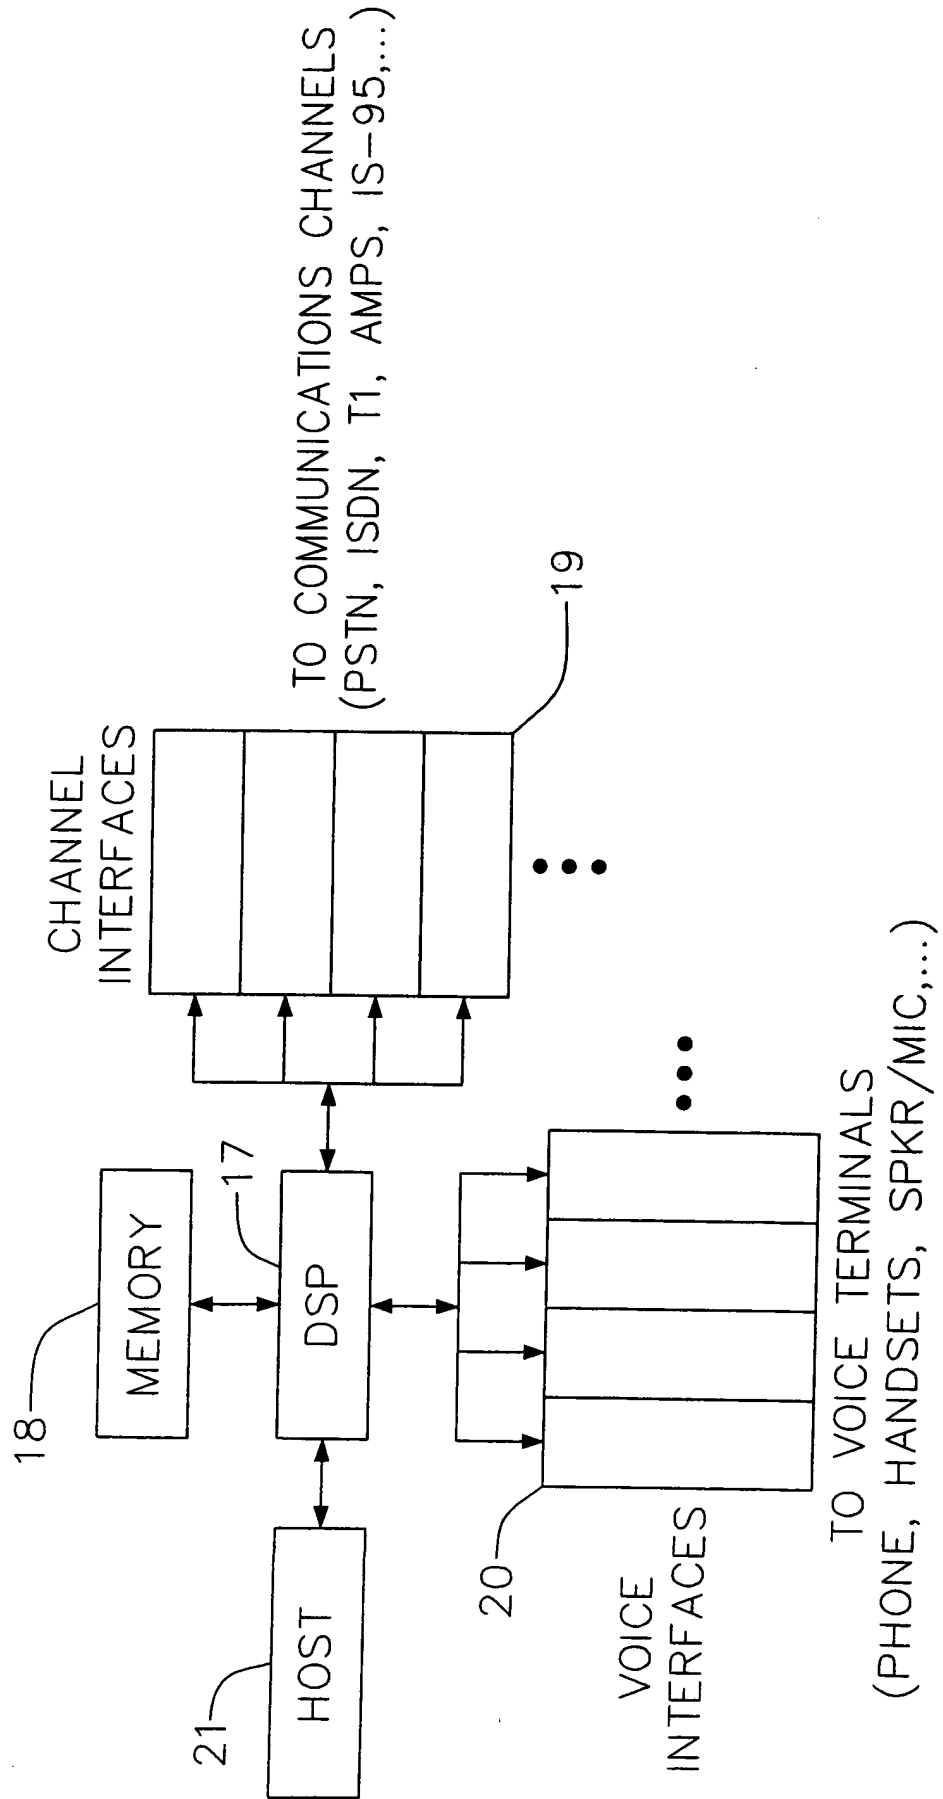 


FIG. 3

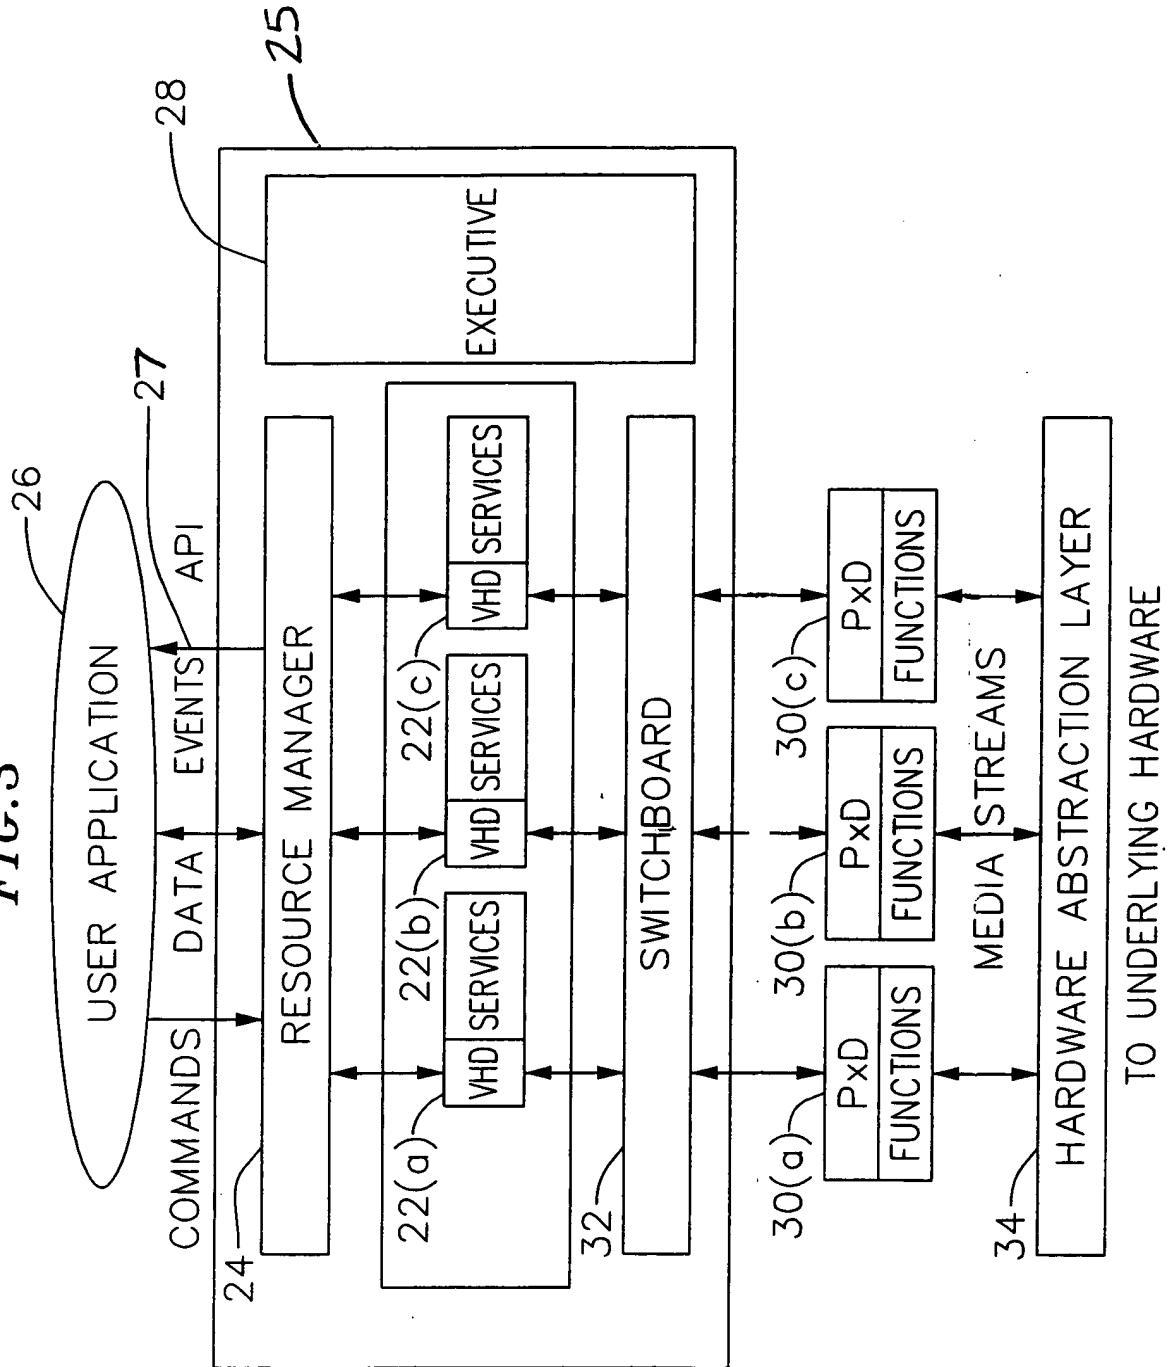 


FIG. 4




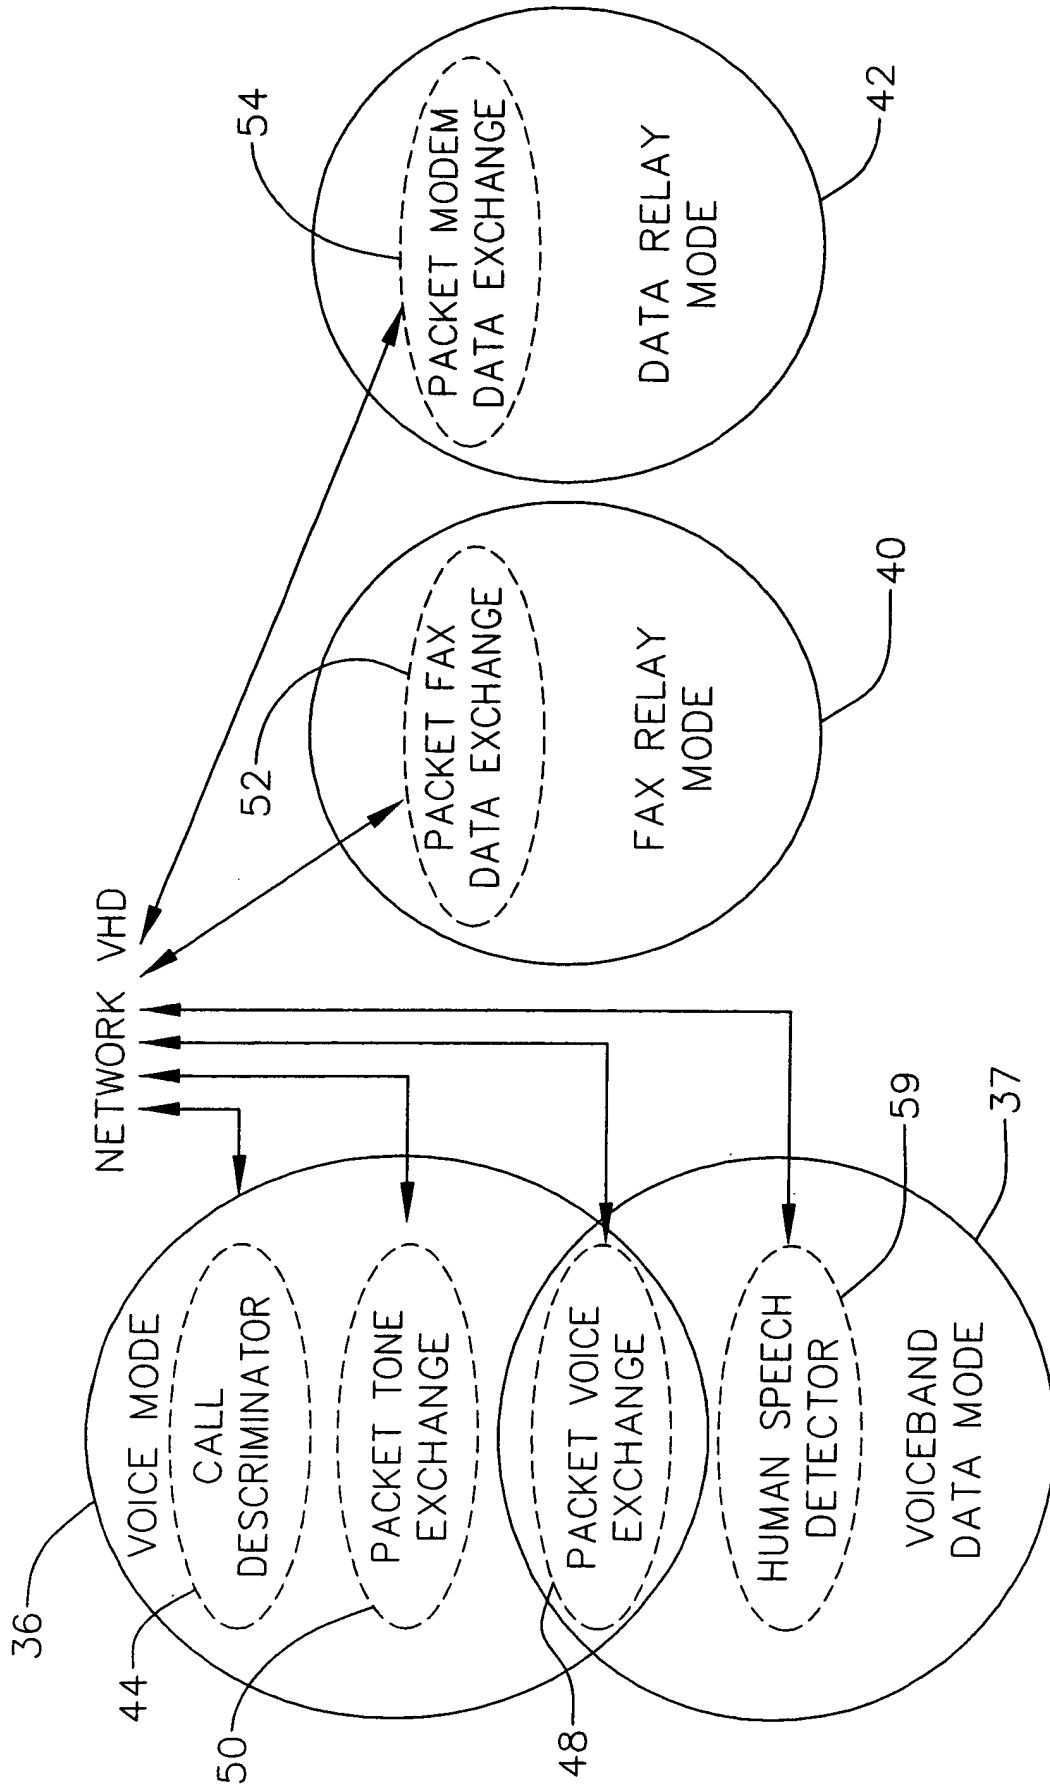 


FIG. 5

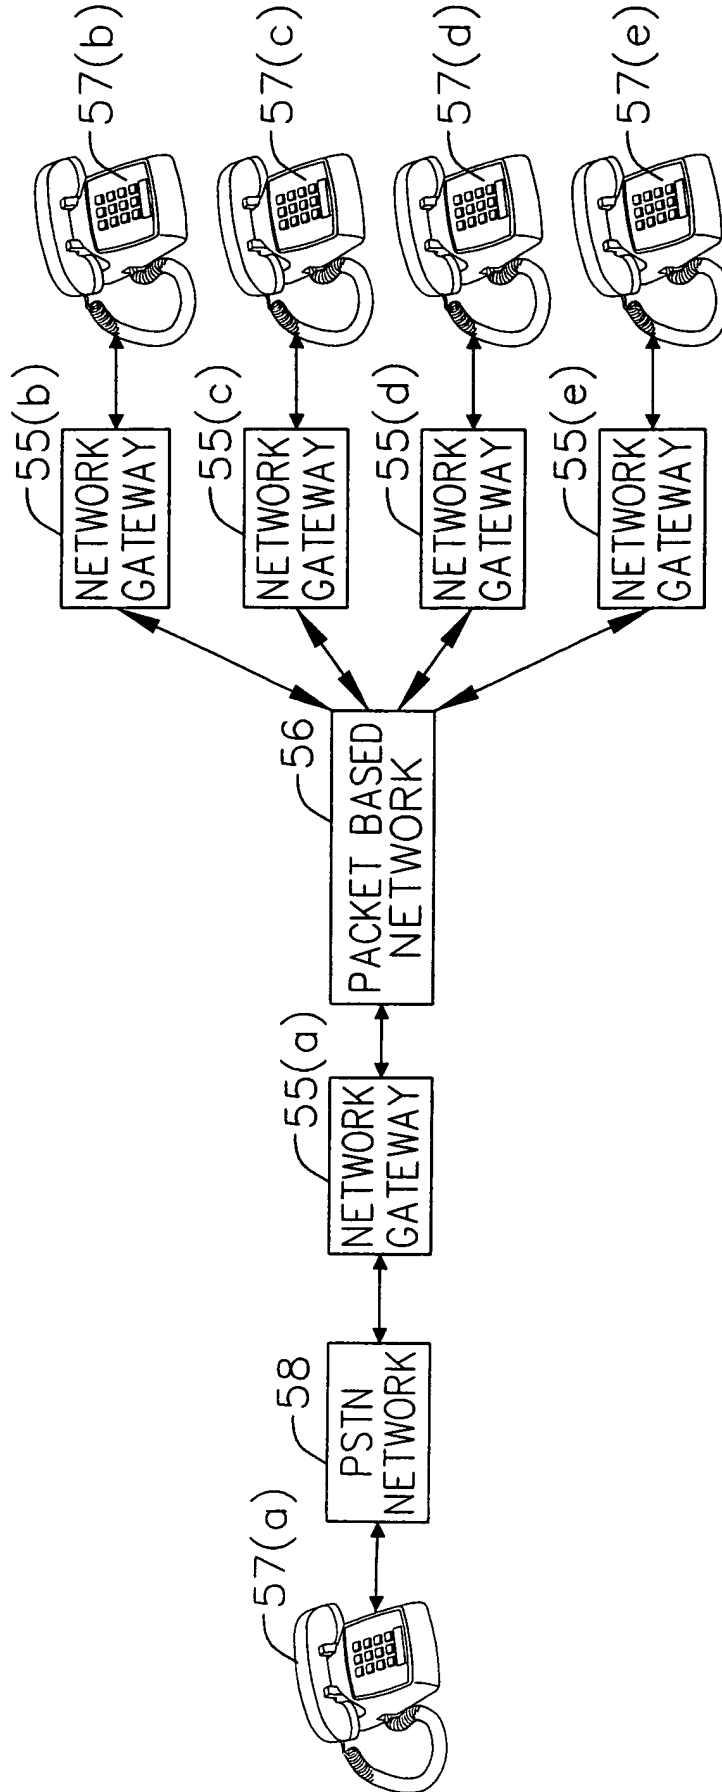 

**FIG. 6**

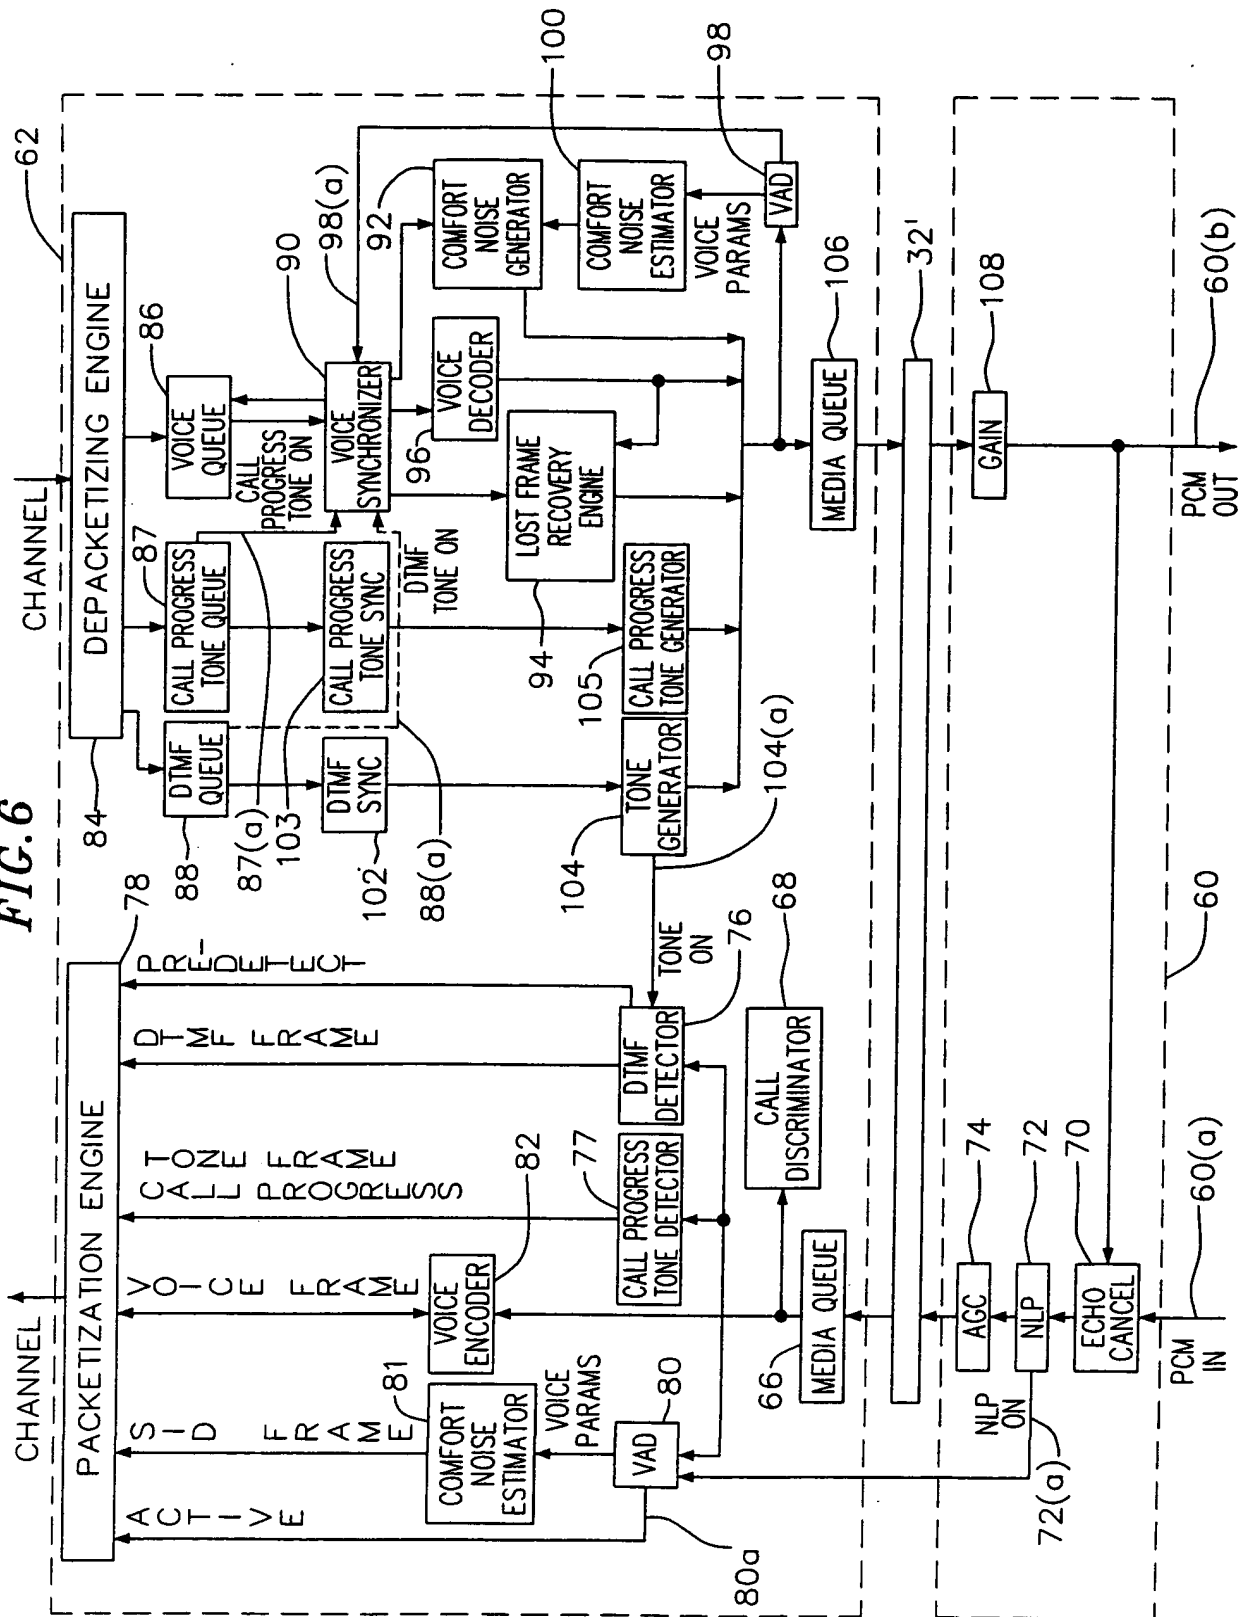 

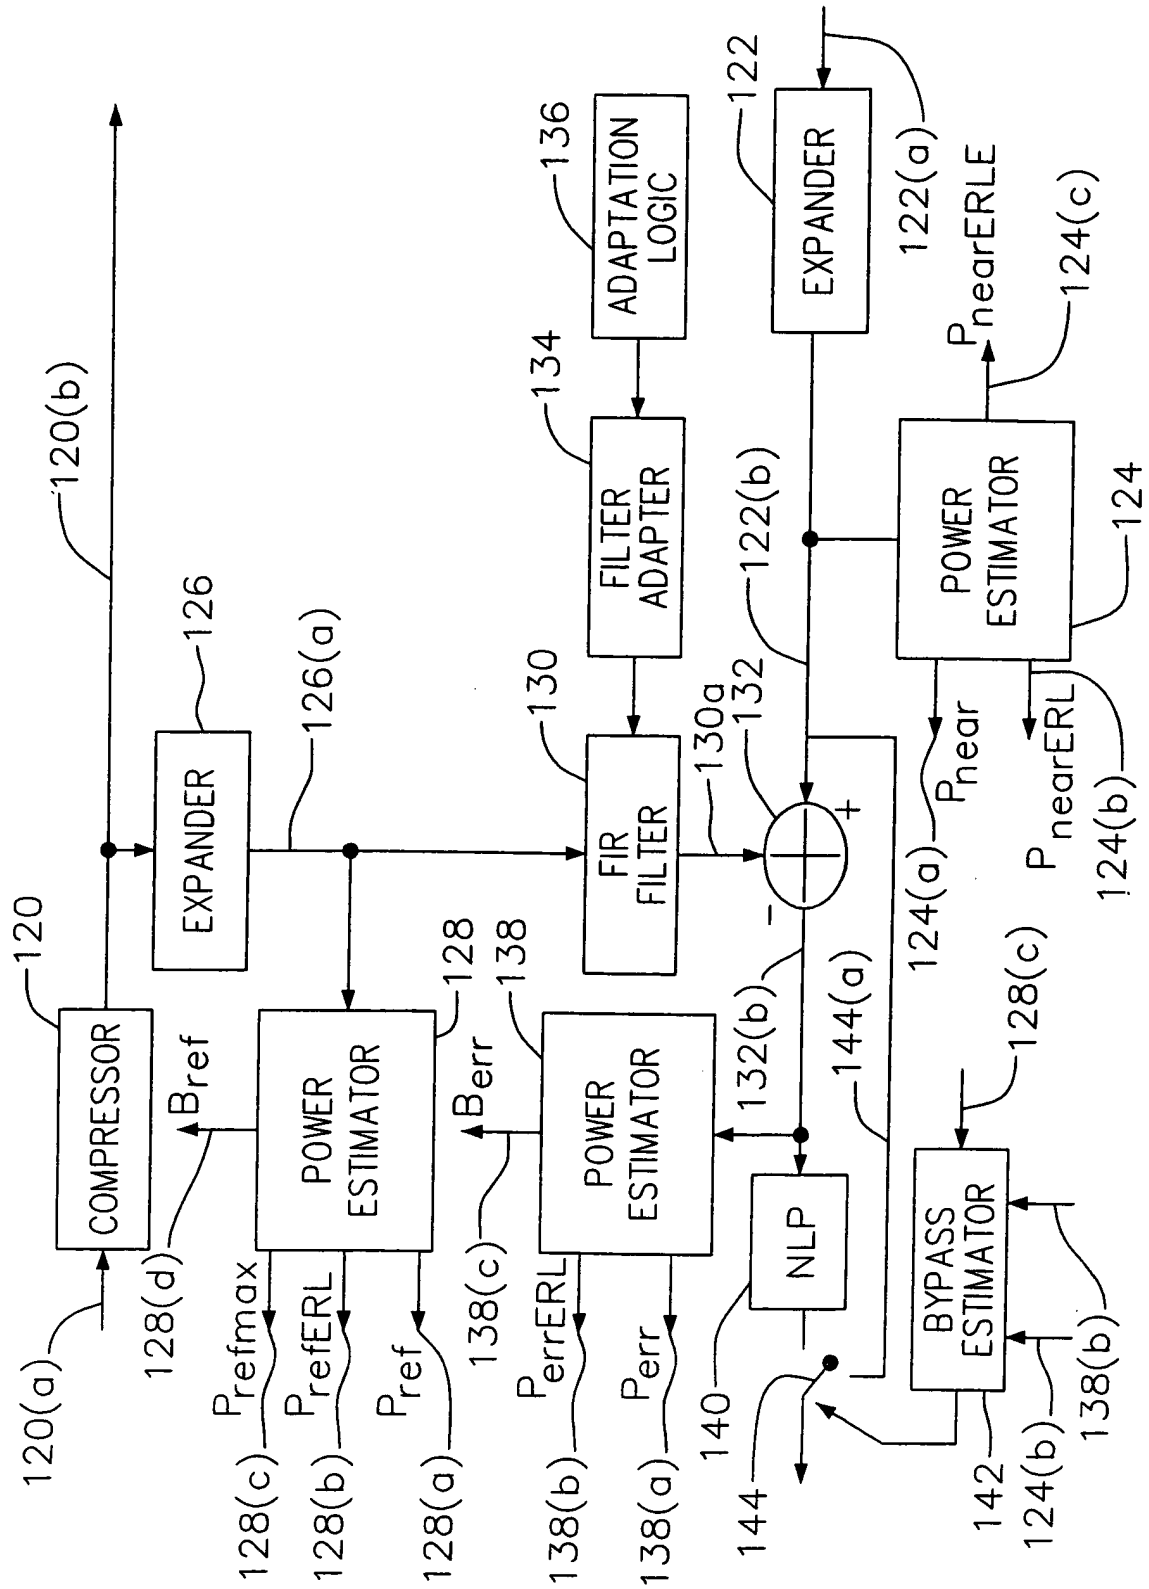 

**FIG. 7**

FIG. 8A

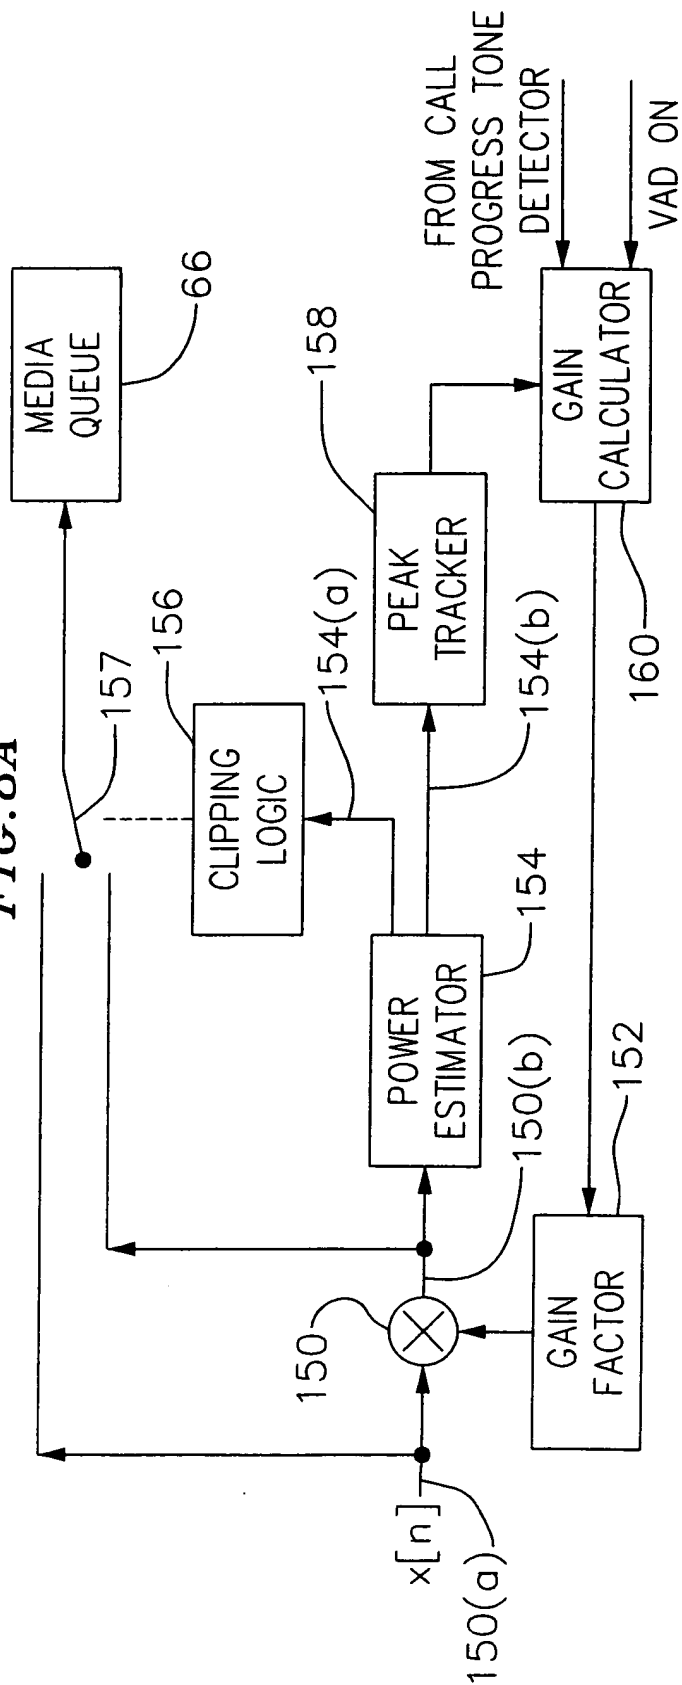 


FIG. 8B


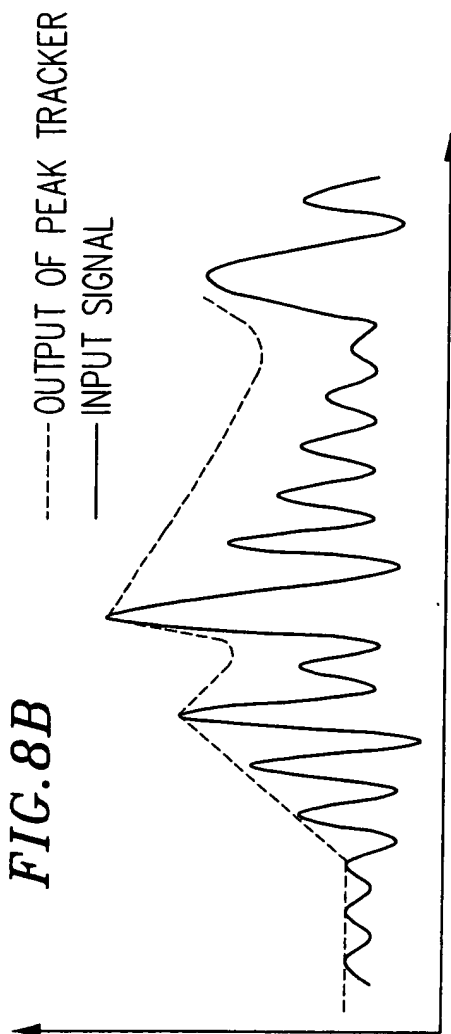 




FIG. 9

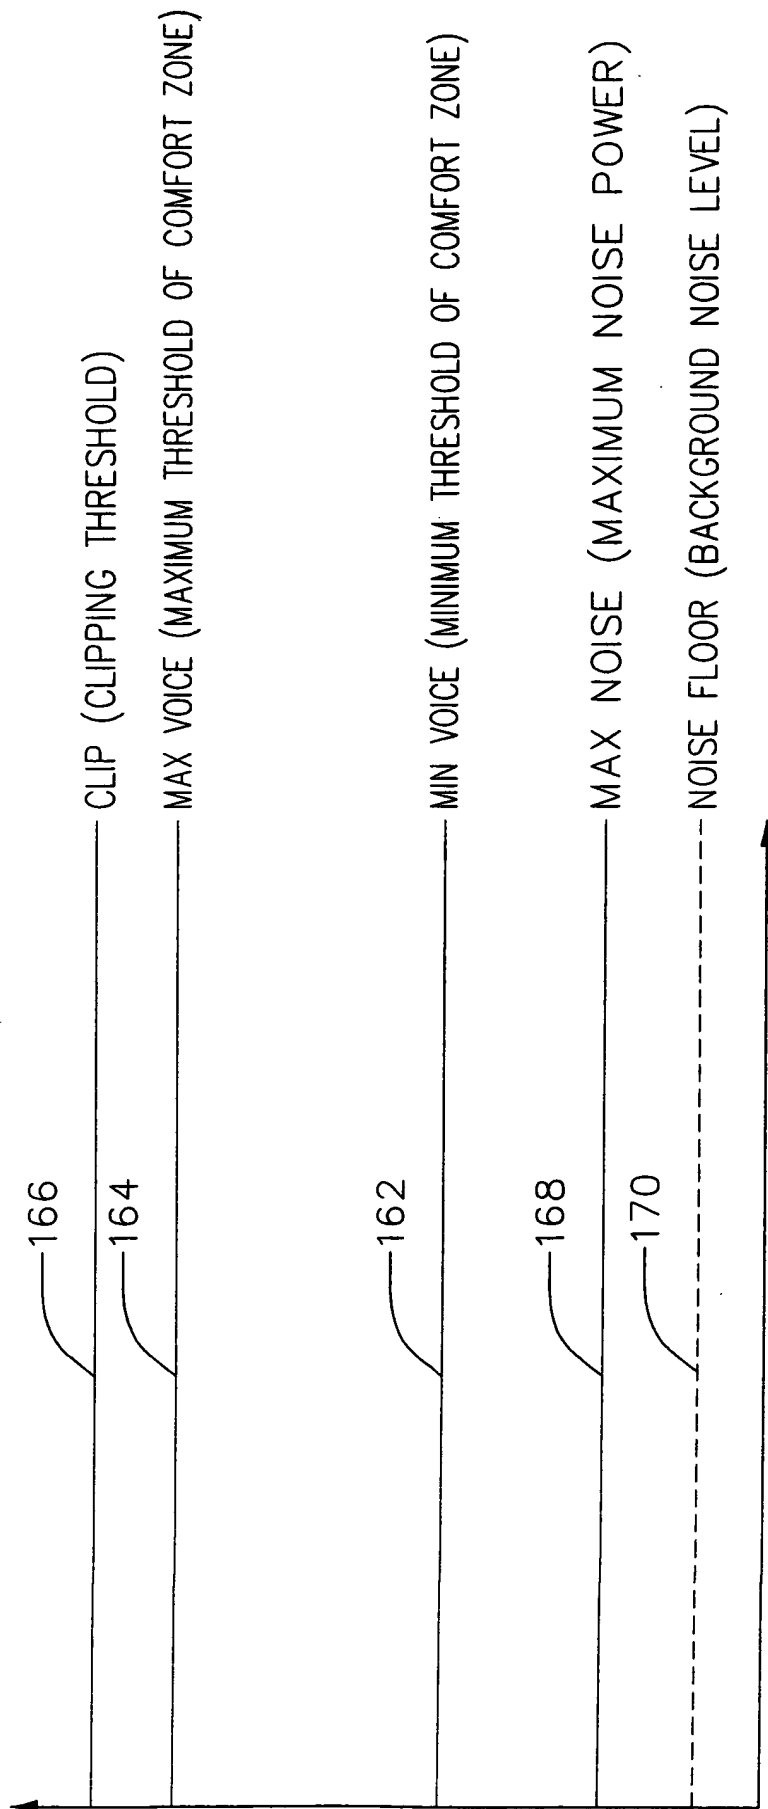 



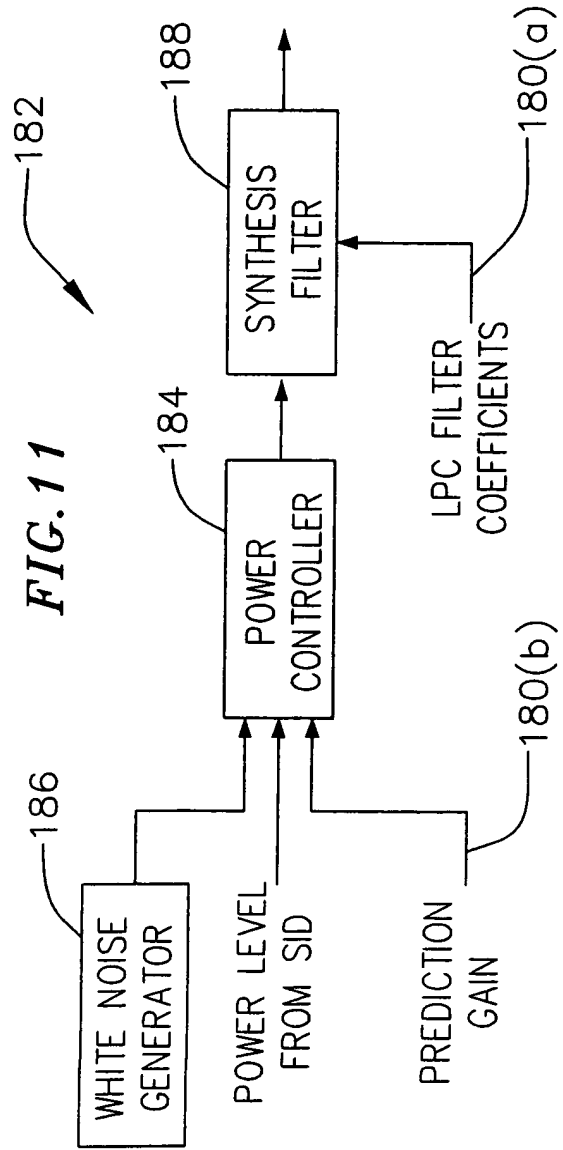 
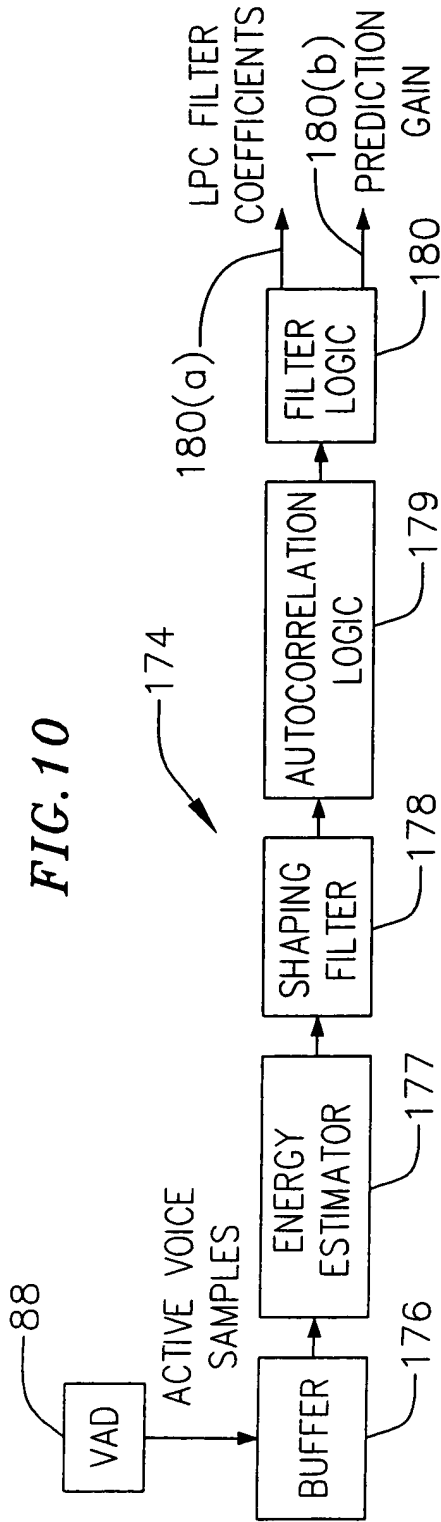 



FIG. 12

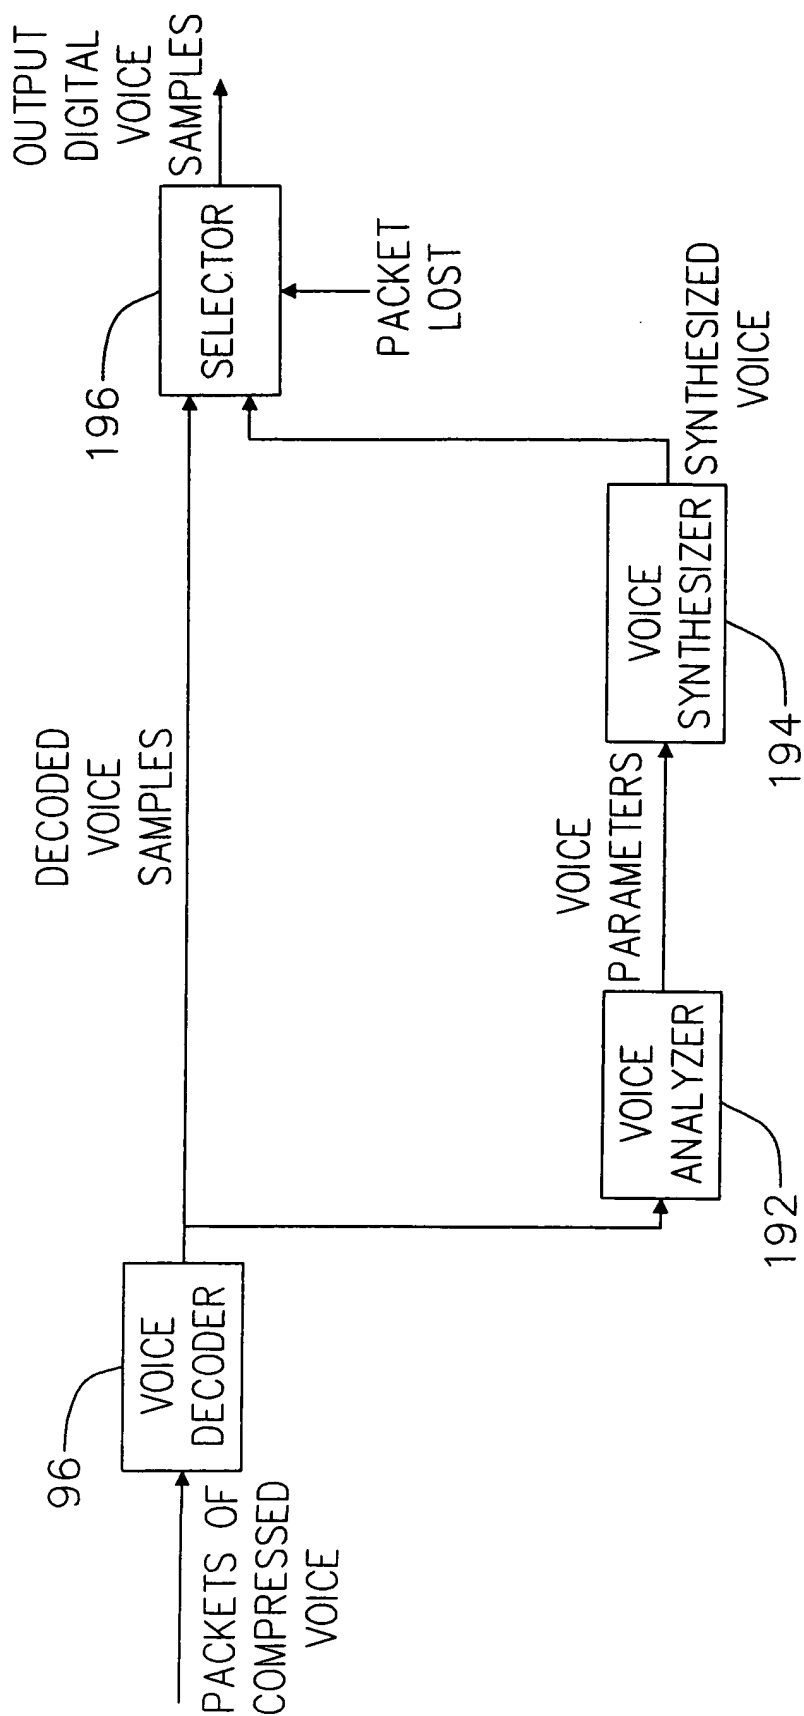 

**FIG. 13A**

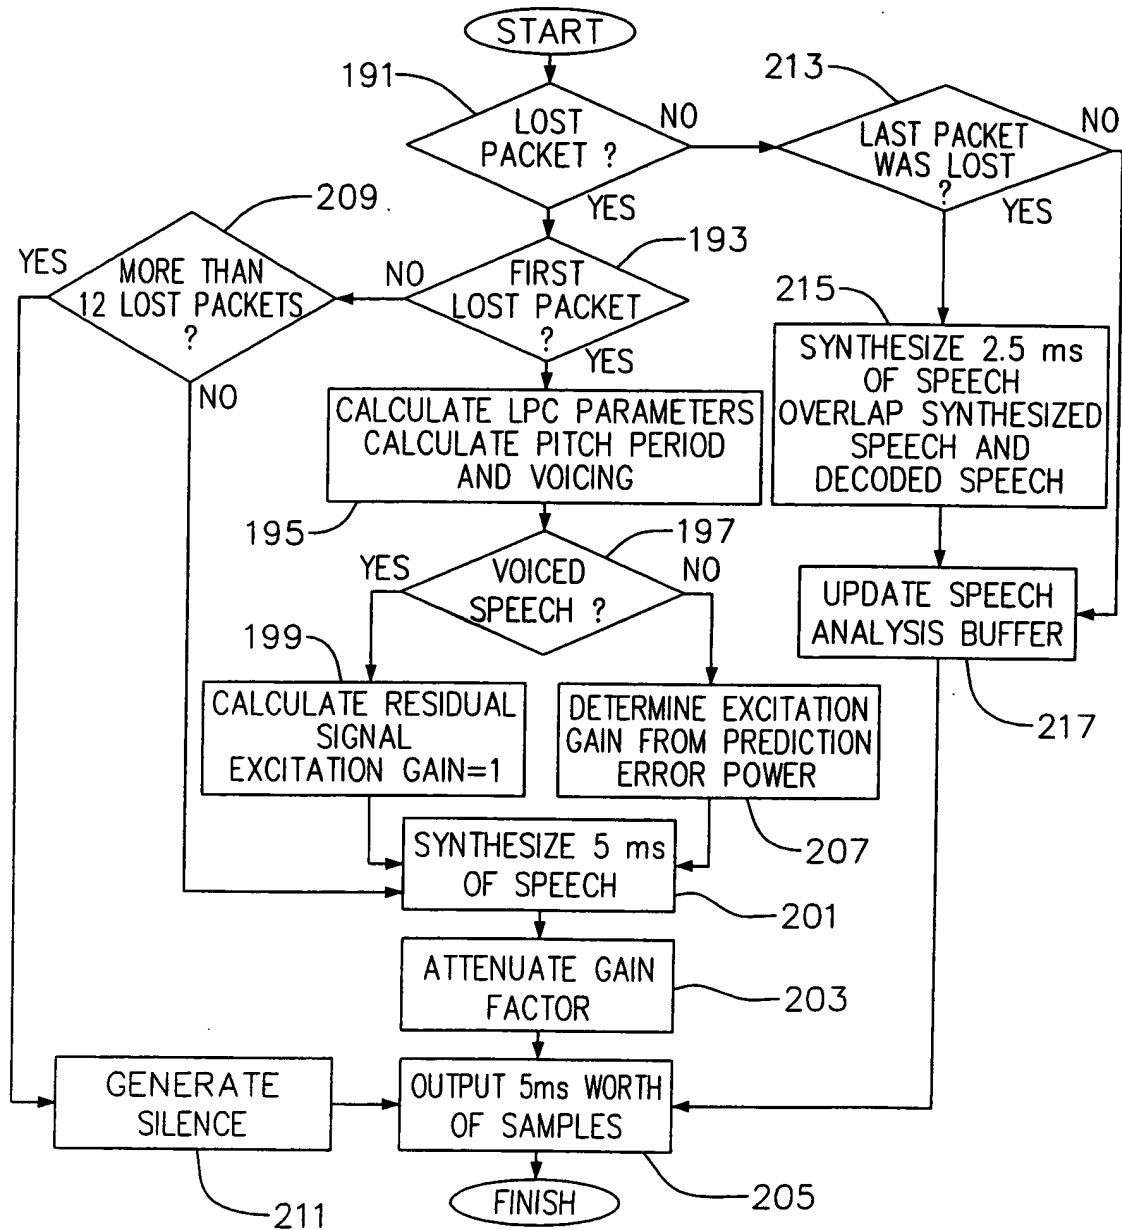 

**FIG. 13B**

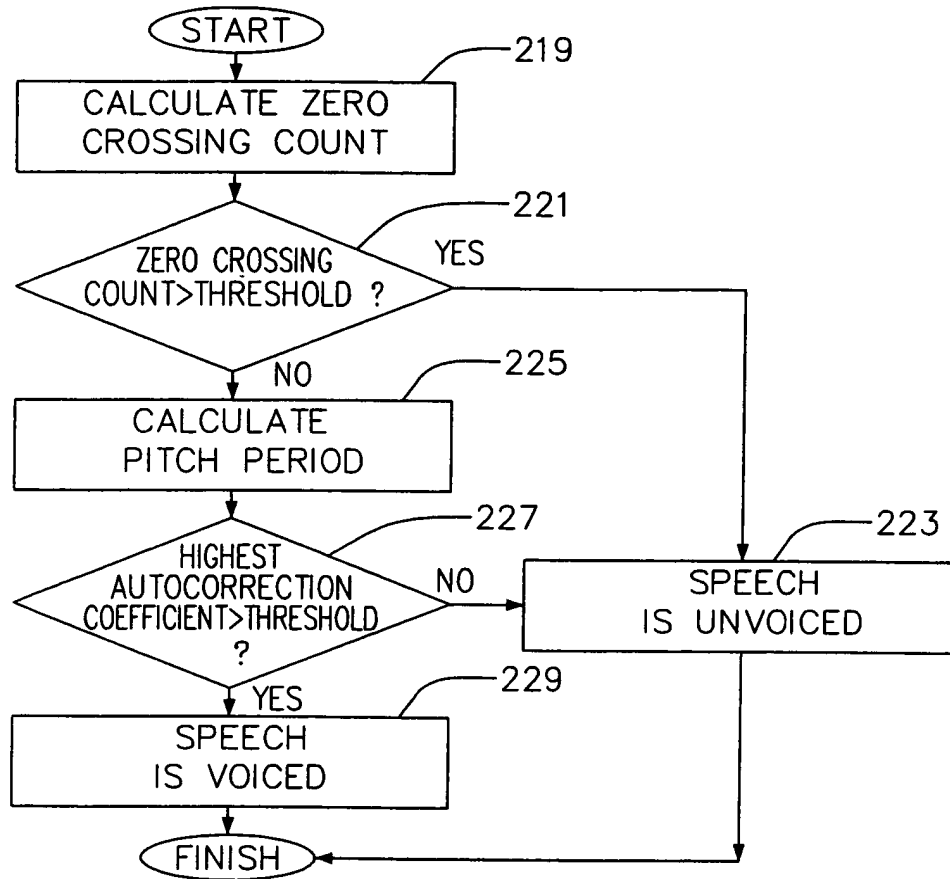 

**FIG. 13C**


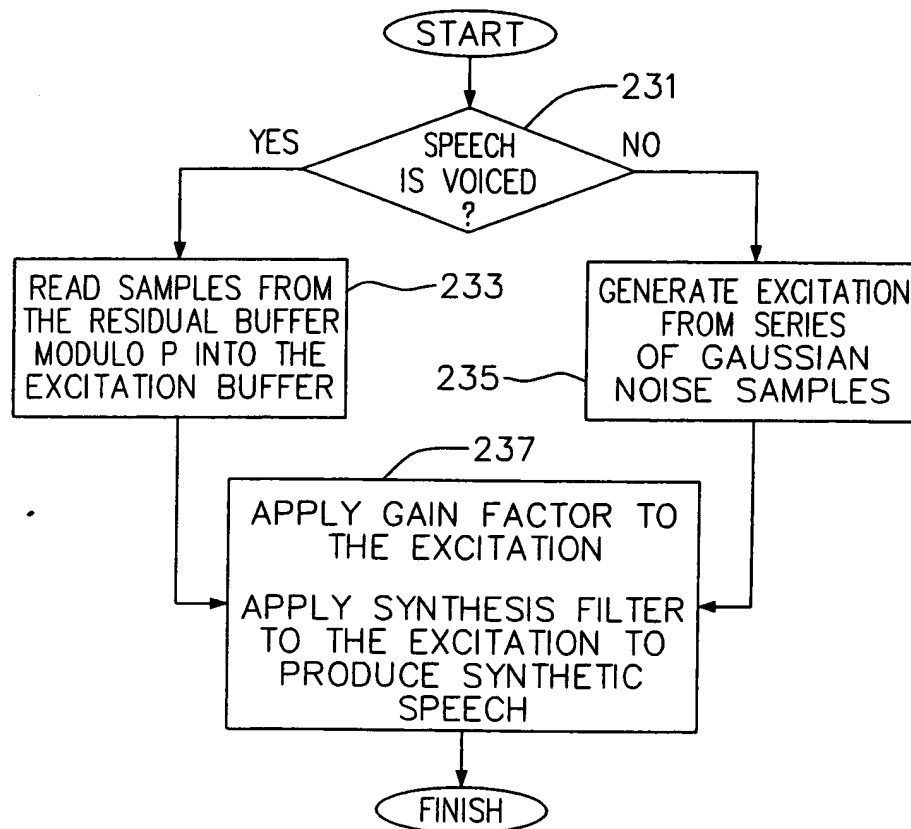 


FIG. 14

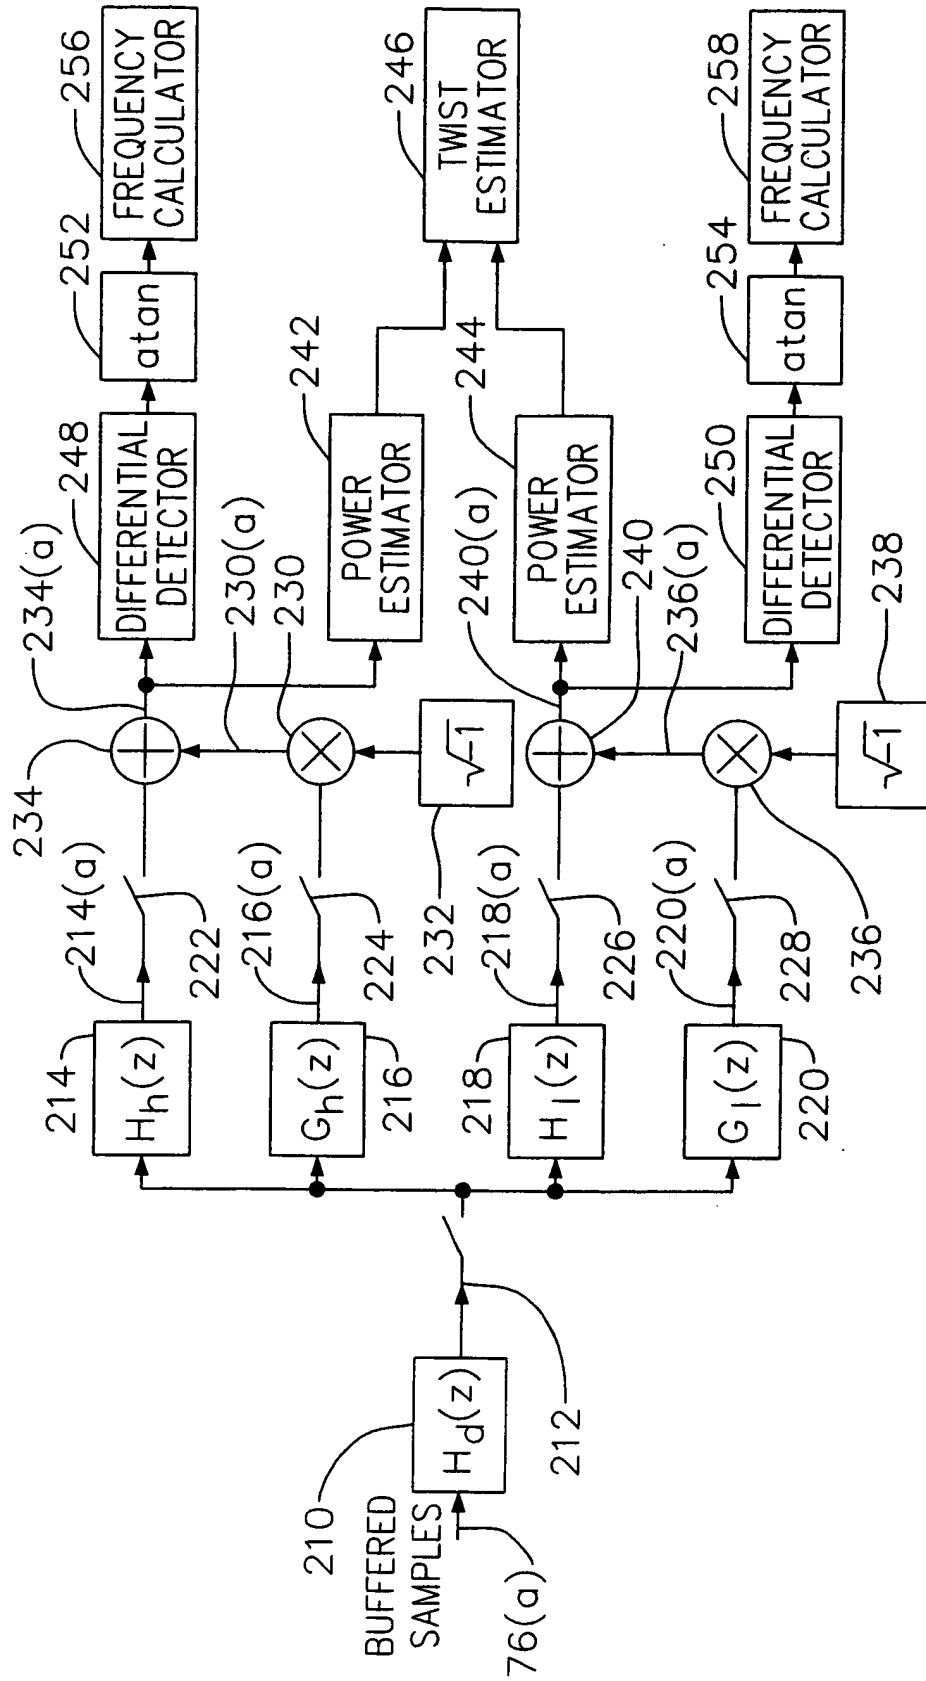 

*FIG. 14A*

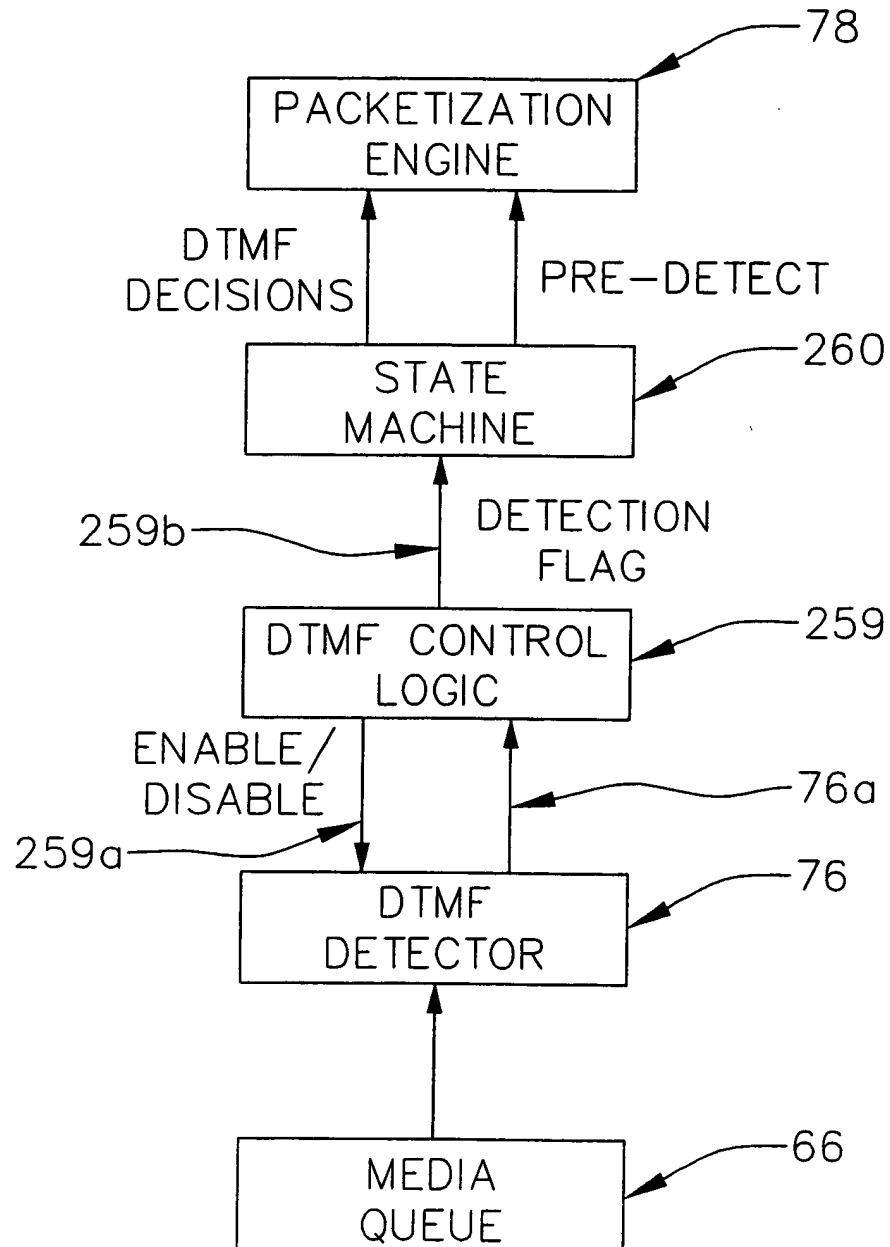 
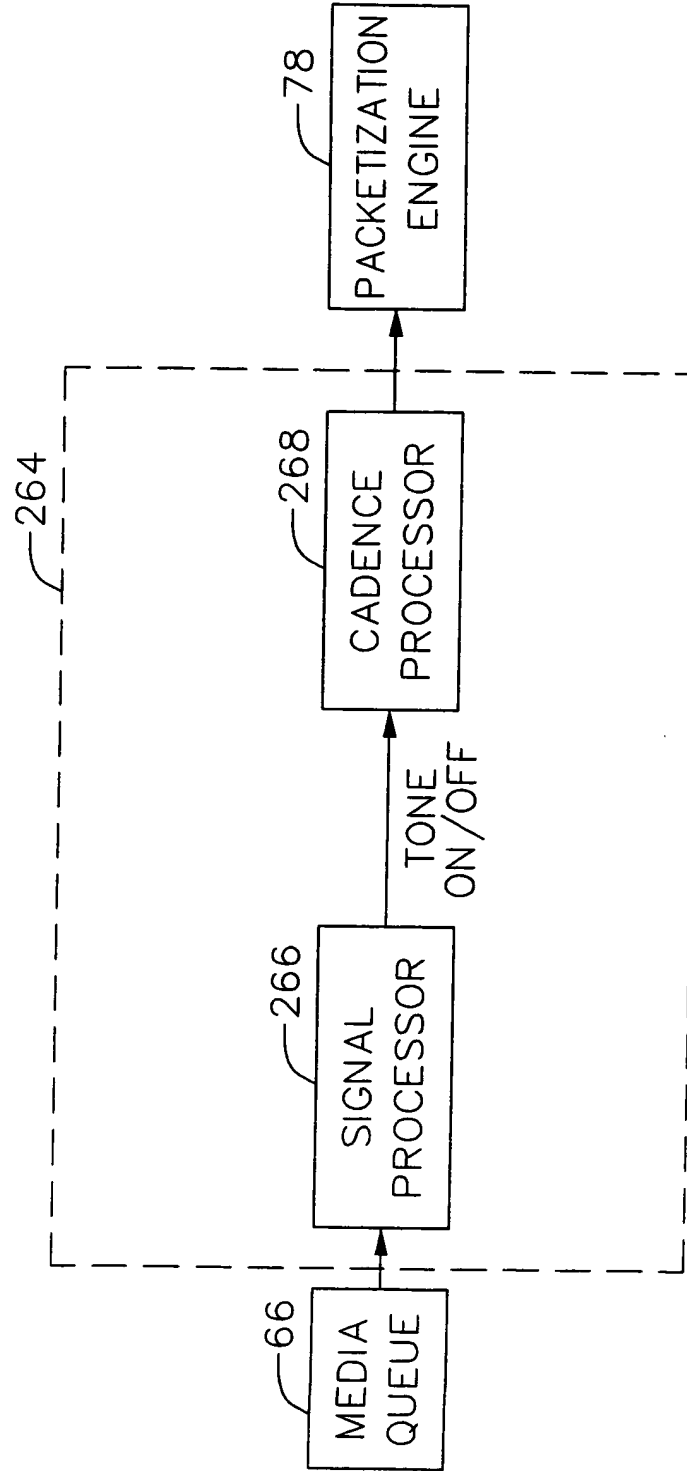 
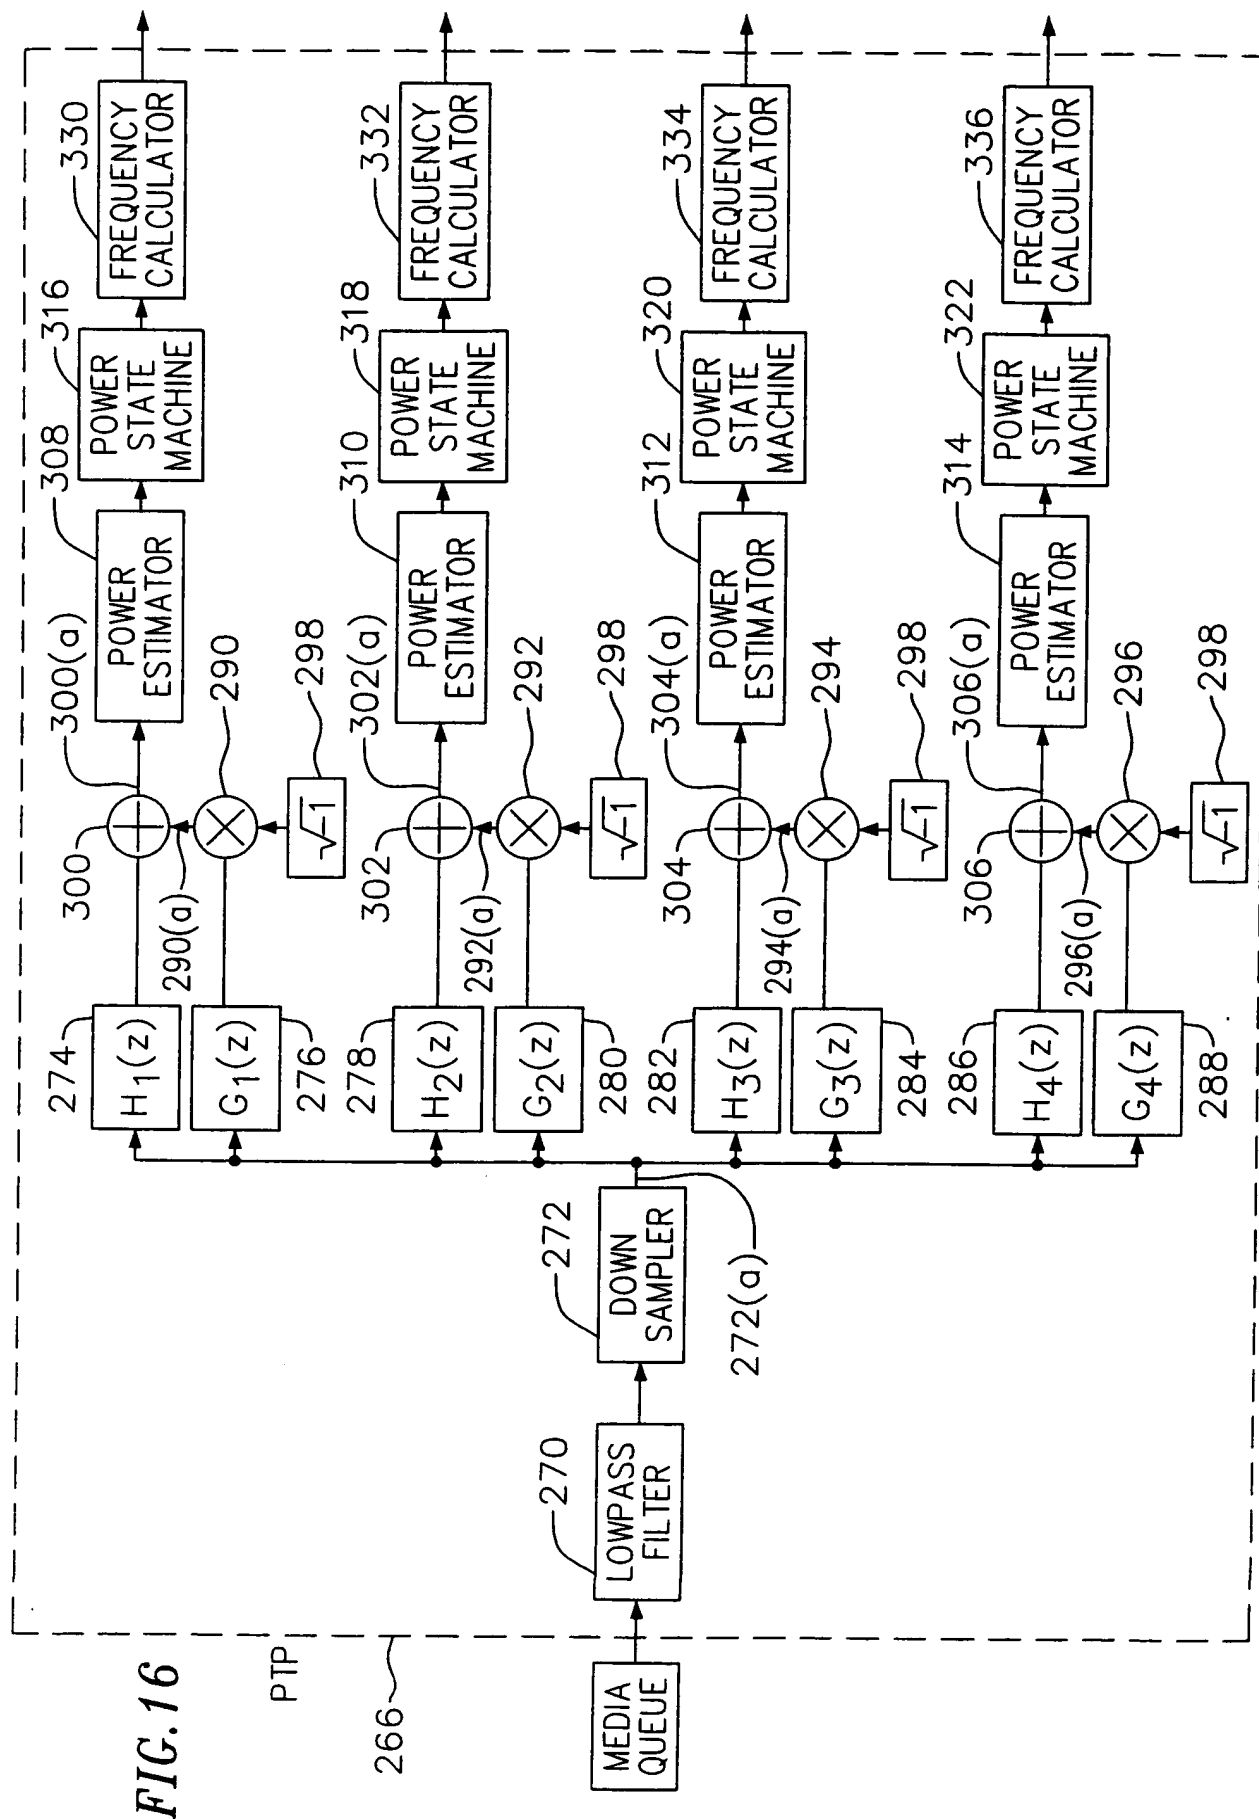 


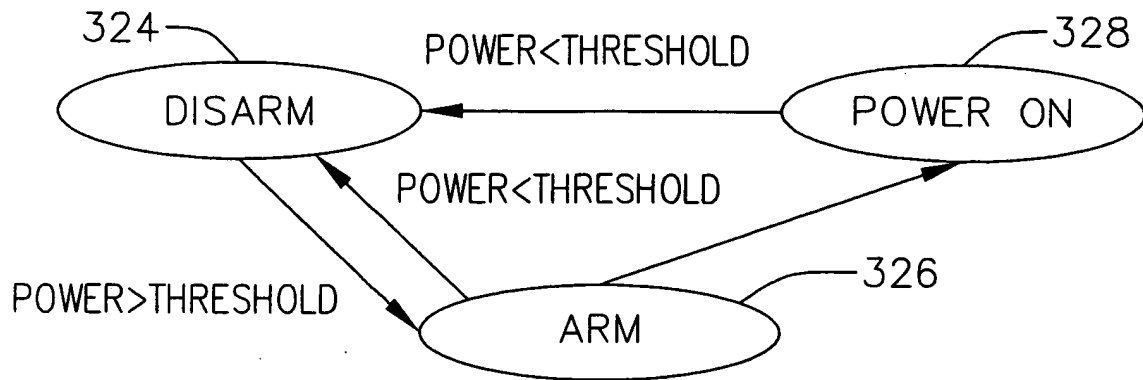 


FIG. 15





**FIG. 17**



**FIG. 18**

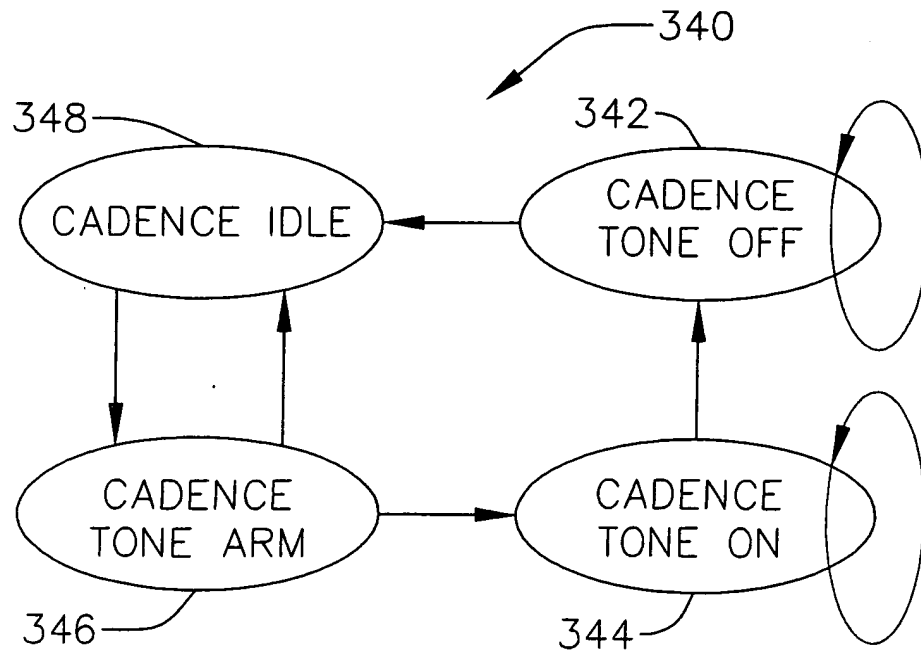 


FIG. 18A

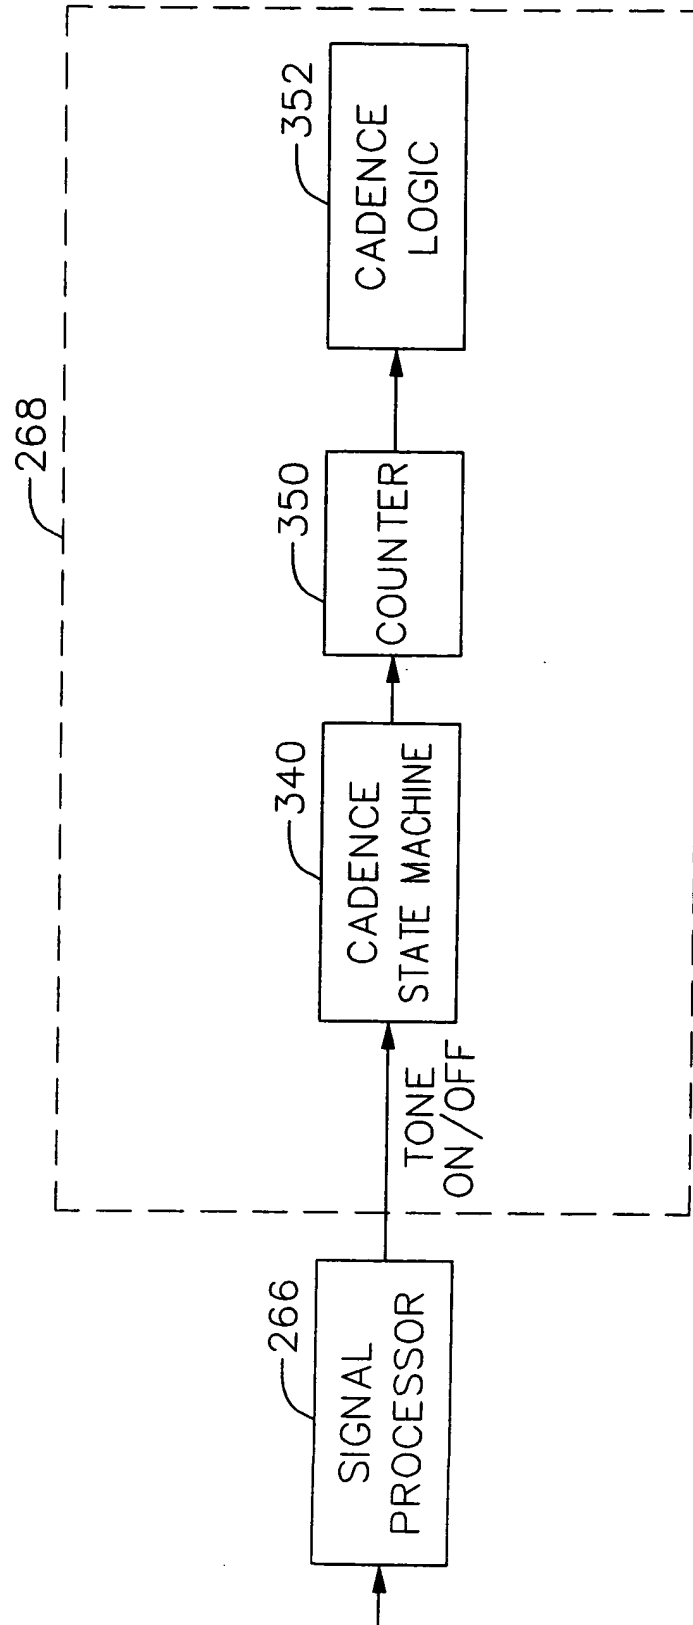 


FIG. 19

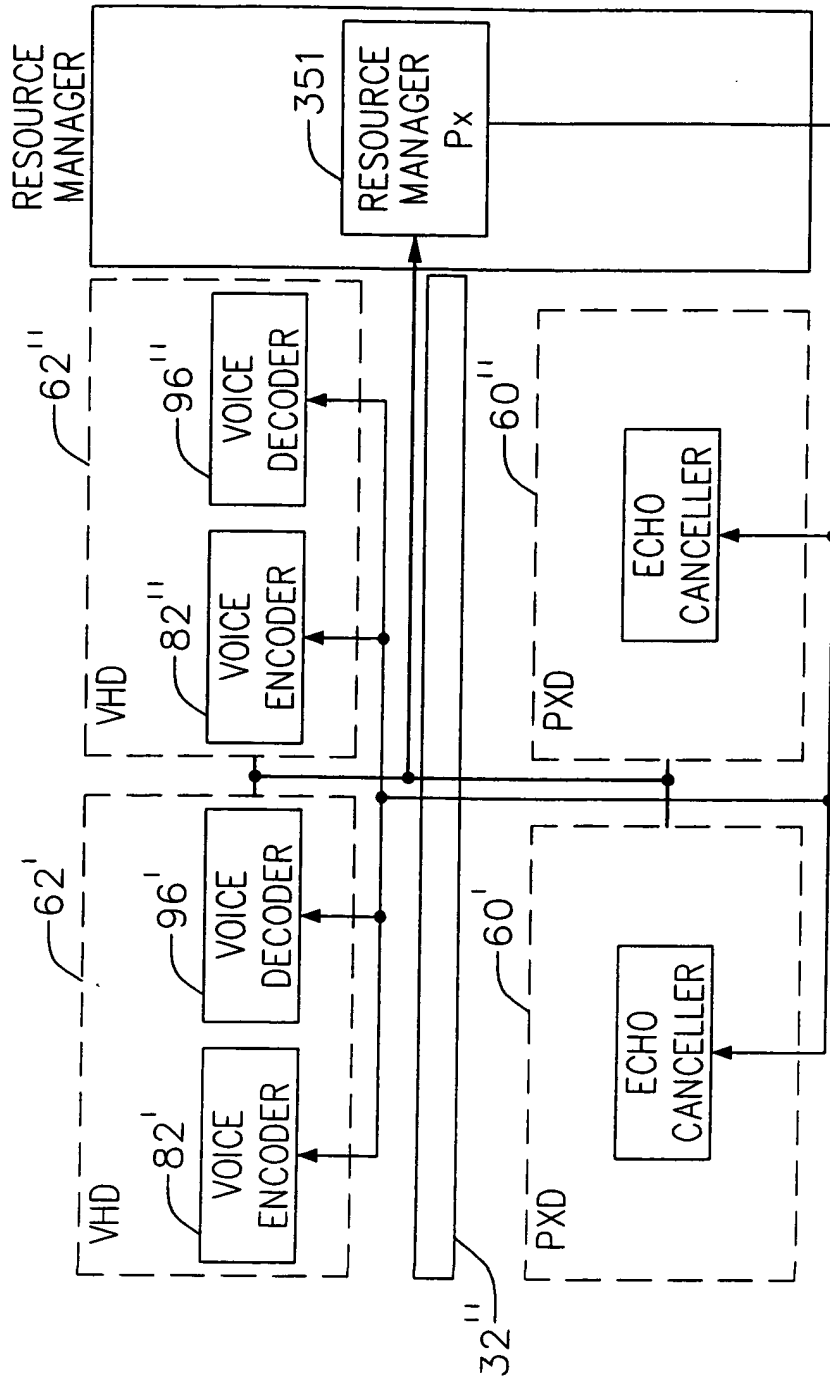 


FIG. 20



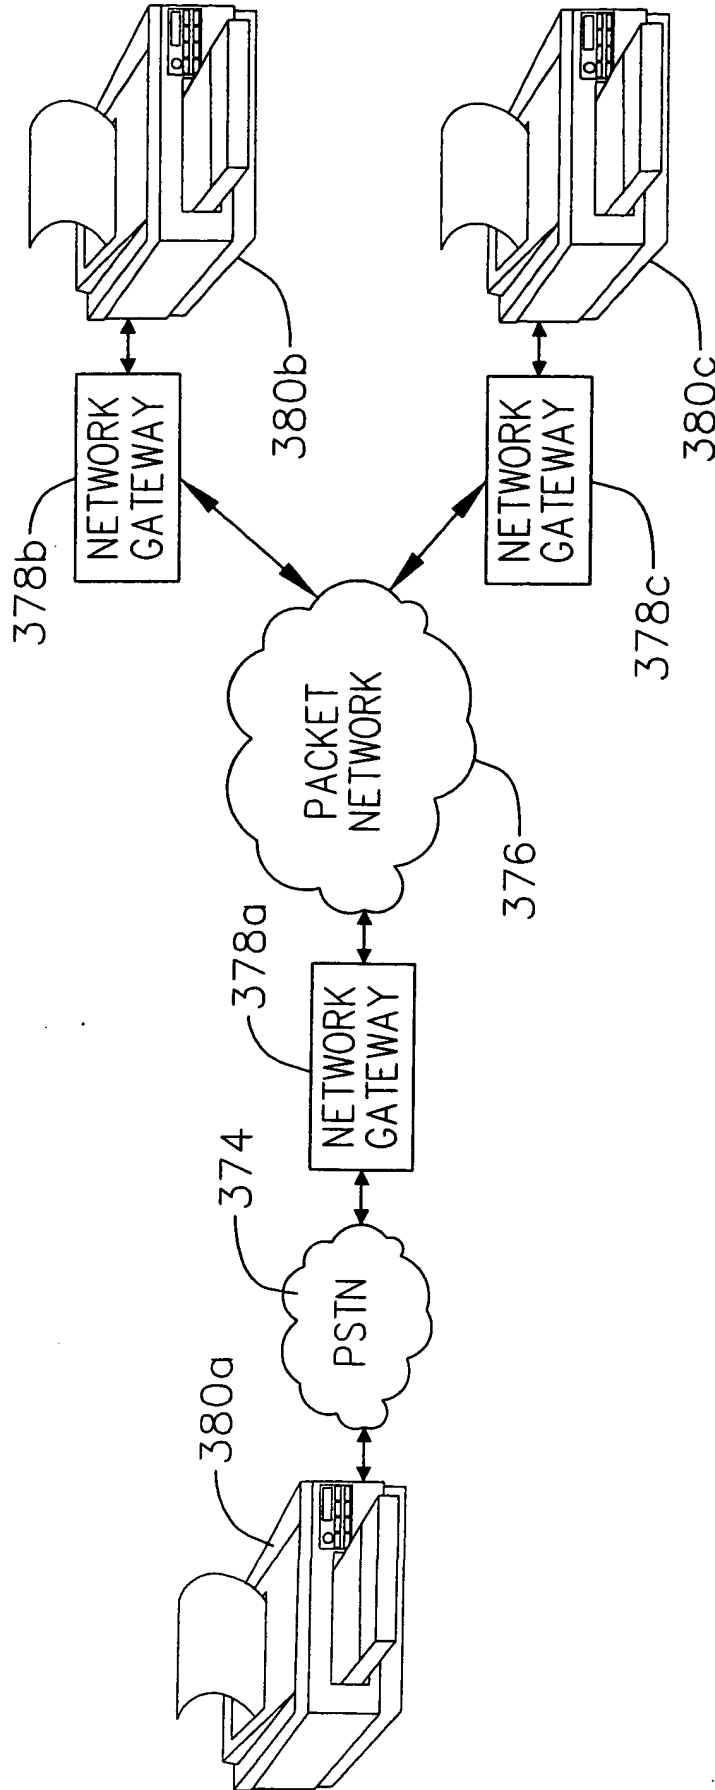 


FIG. 21

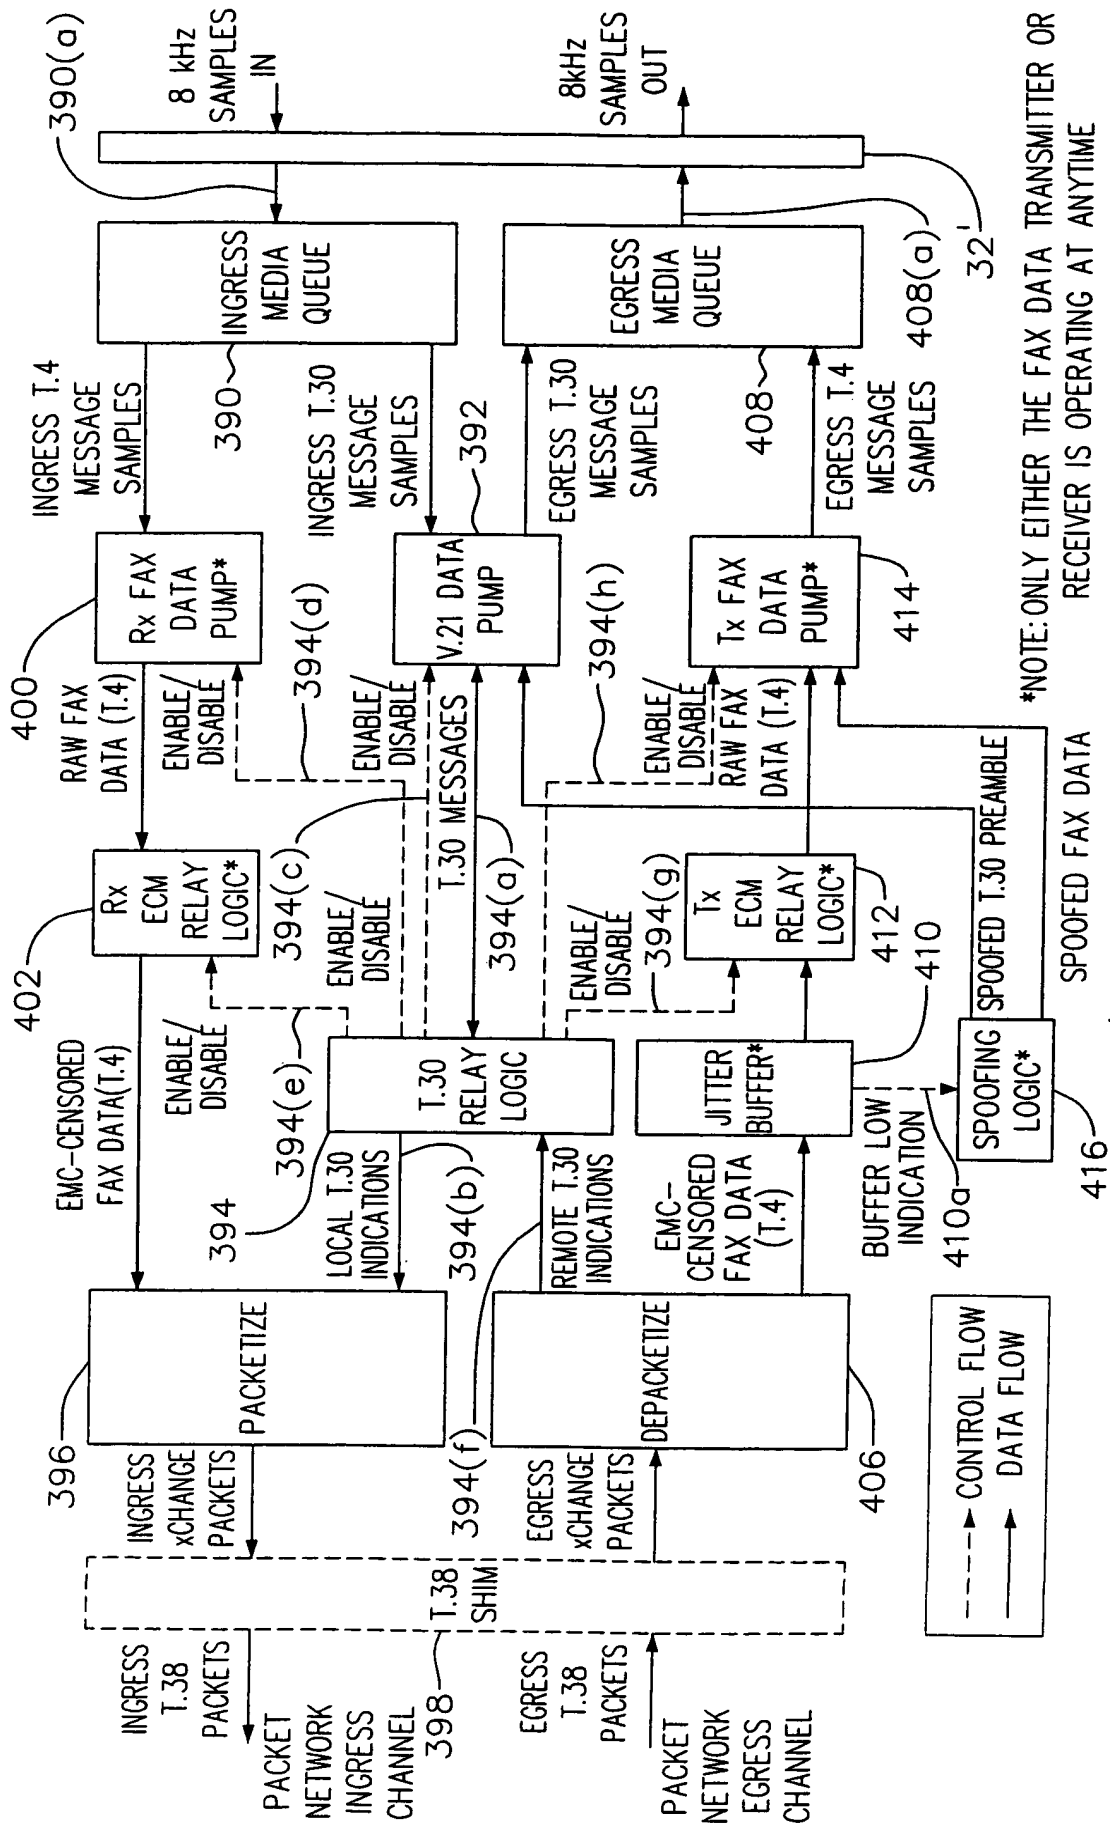 

**FIG.22**

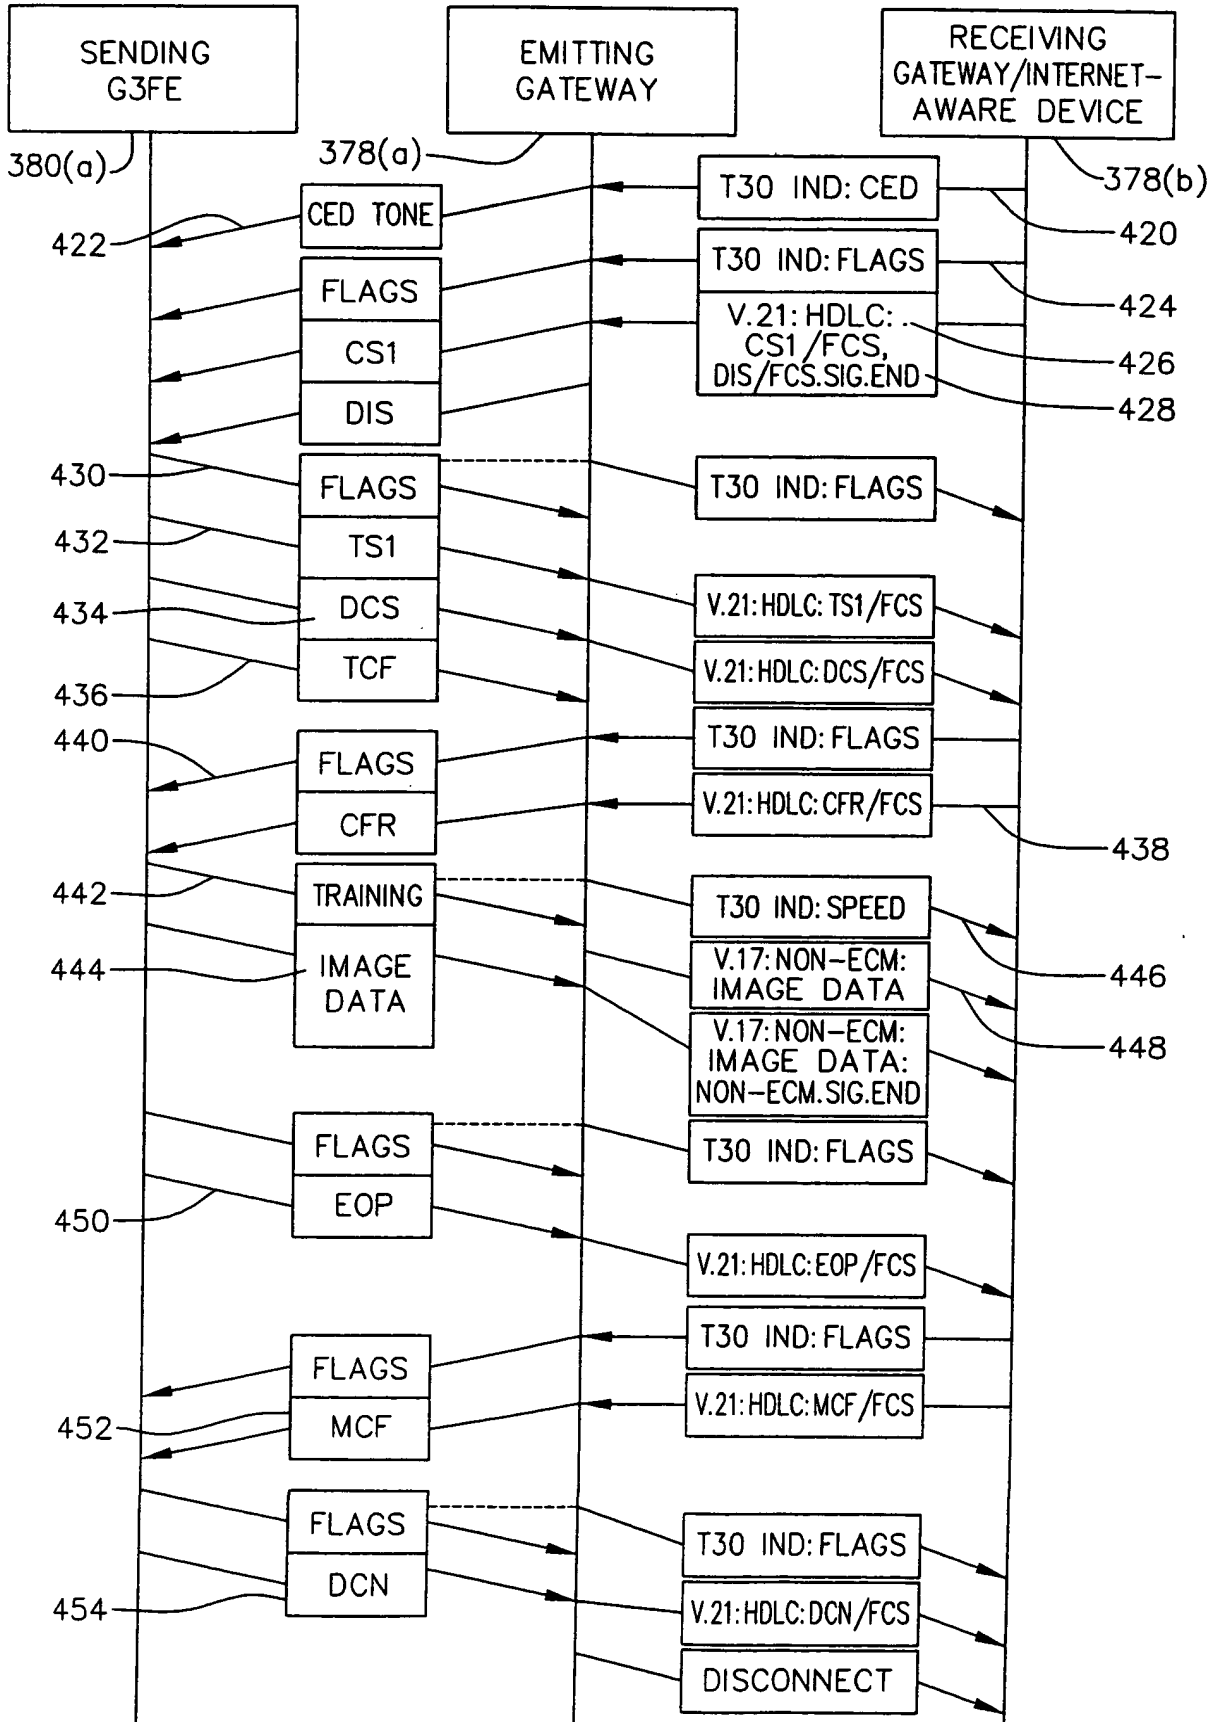 



**FIG. 23**


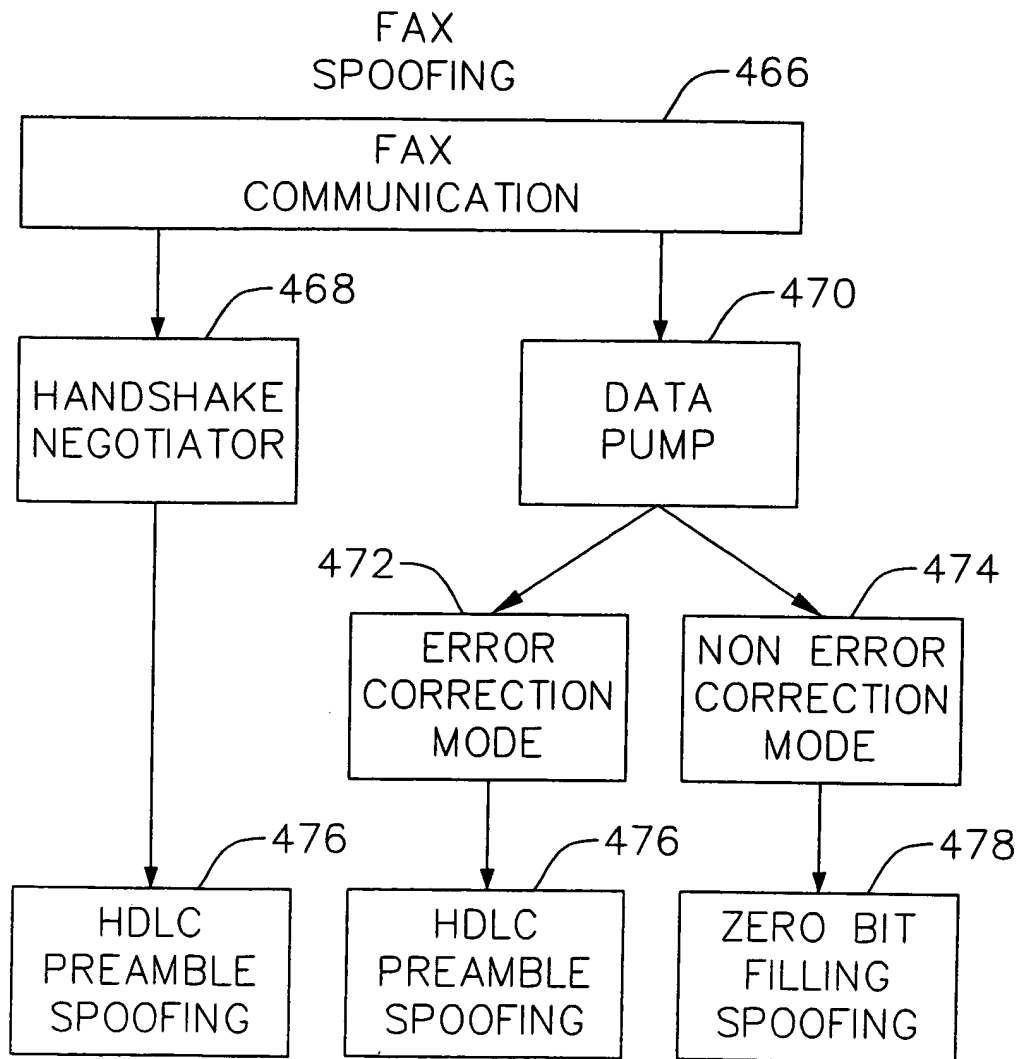 


FIG. 24

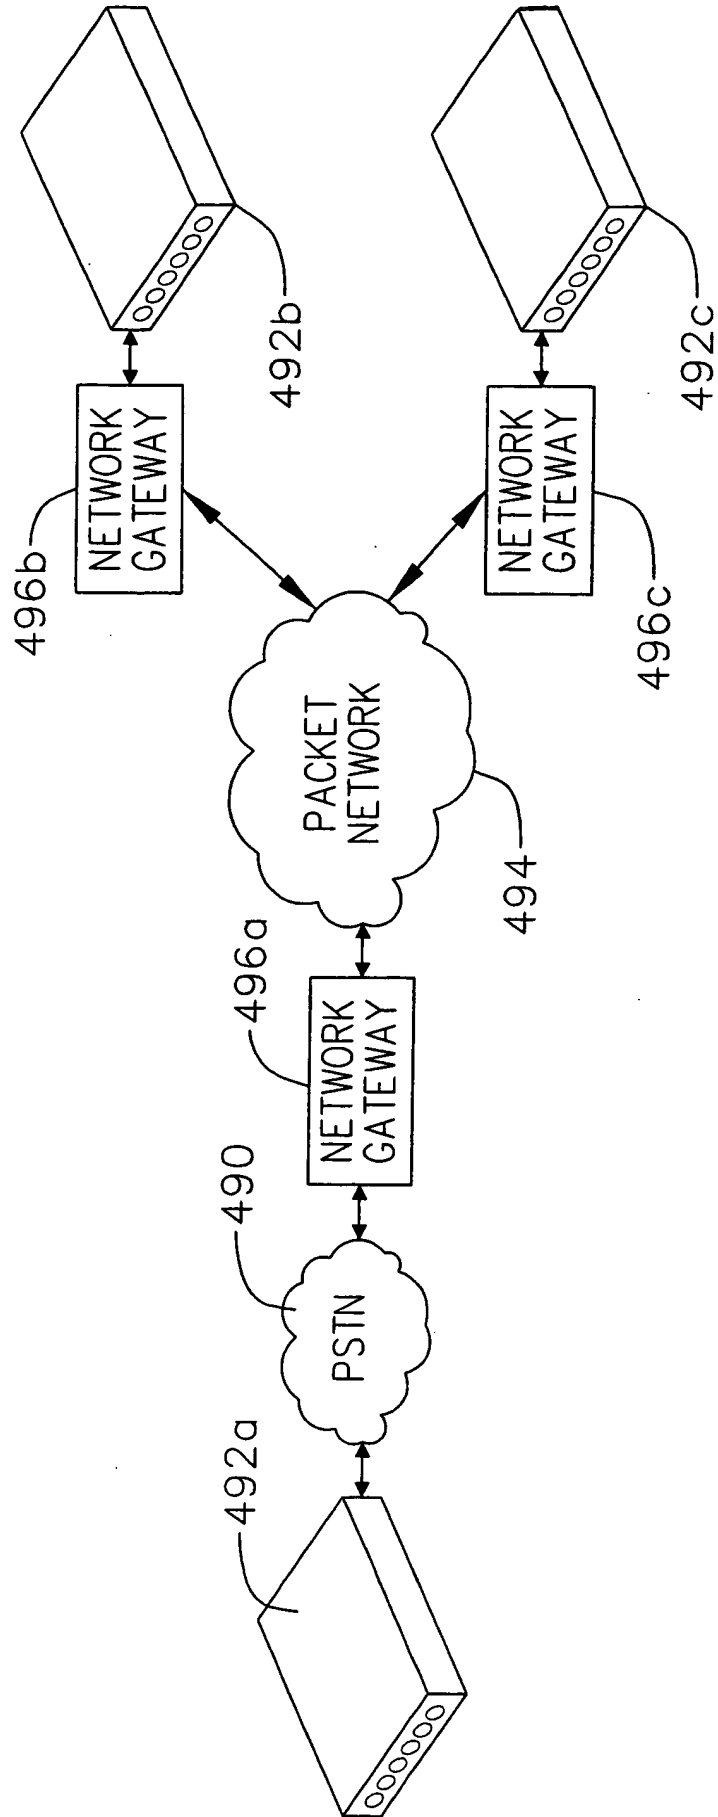 

**FIG. 25**

The diagram illustrates a V.42 modem system with the following components and data/control flows:

- PACKETIZE (506):** Receives **LOCAL ANS(am), AA, AC INDICATIONS** (502(e)) and **LOCAL V.14/V.42 INDICATION** (524(d)). It outputs **INGRESS DATA** (520(c)) and **LOCAL RATE CODES** (520(b)).
- DE-PACKETIZE (508):** Receives **REMOTE RATE CODES** (520(c)) and **REMOTE V.14/V.42 INDICATION** (520(b)). It outputs **REMOTE ANS(am), AA, AC INDICATIONS** (502(e)) and **EGRESS DATA** (510).
- CALL NEGOTIATOR (502):** Exchanges **LOCAL ANS(am), AA, AC INDICATIONS** (502(e)) and **EGRESS SAMPLES(ANSam, V.8 MENUS)** (502(a)) with the **DATA PUMP Rx**.
- DATA PUMP Rx (504):** Receives **INGRESS SAMPLES (DATA)** (504) and outputs **INGRESS MEDIA QUEUE** (500) and **INGRESS SAMPLES(ANSam, V.8 MENUS)** (502(a)).
- DATA PUMP STATE MACHINE (522):** Receives **LOCAL RATE CODES** (520(b)) and **LOCAL ANS, AA, AC INDICATIONS** (524(a)). It outputs **RATE CODES** (520(a)) and **NEGOTIATION MESSAGES** (V.42).
- DATA PUMP Tx (512):** Receives **EGRESS SAMPLES (DATA)** (512) and outputs **EGRESS MEDIA QUEUE** (514) and **EGRESS SAMPLES(ANSam, V.8 MENUS)** (502(d)).
- ERROR CONTROL MODE NEGOTIATION LOGIC (524):** Receives **LOCAL ANS, AA, AC INDICATIONS** (524(a)) and **LOCAL RATE CODES** (520(b)). It outputs **EGRESS SAMPLES(ANSam, V.8 MENUS)** (502(a)) and **EGRESS DATA** (510).
- RATE NEGOTIATOR (520):** Receives **LOCAL RATE CODES** (520(b)) and **REMOTE RATE CODES** (520(c)). It outputs **RATE CODES** (520(a)) and **NEGOTIATION MESSAGES** (V.42).
- JITTER BUFFER (510):** Receives **EGRESS DATA** (510) and outputs **EGRESS DATA** (510).
- END TO END CLOCK SYNCHRONIZATION LOGIC (518):** Receives **EGRESS DATA** (510) and outputs **EGRESS DATA** (510).
- SPOOFING LOGIC (516):** Receives **EGRESS DATA** (510) and outputs **EGRESS DATA** (510).
- Legend:** Dashed arrows represent **CONTROL FLOW**, and solid arrows represent **DATA FLOW**.

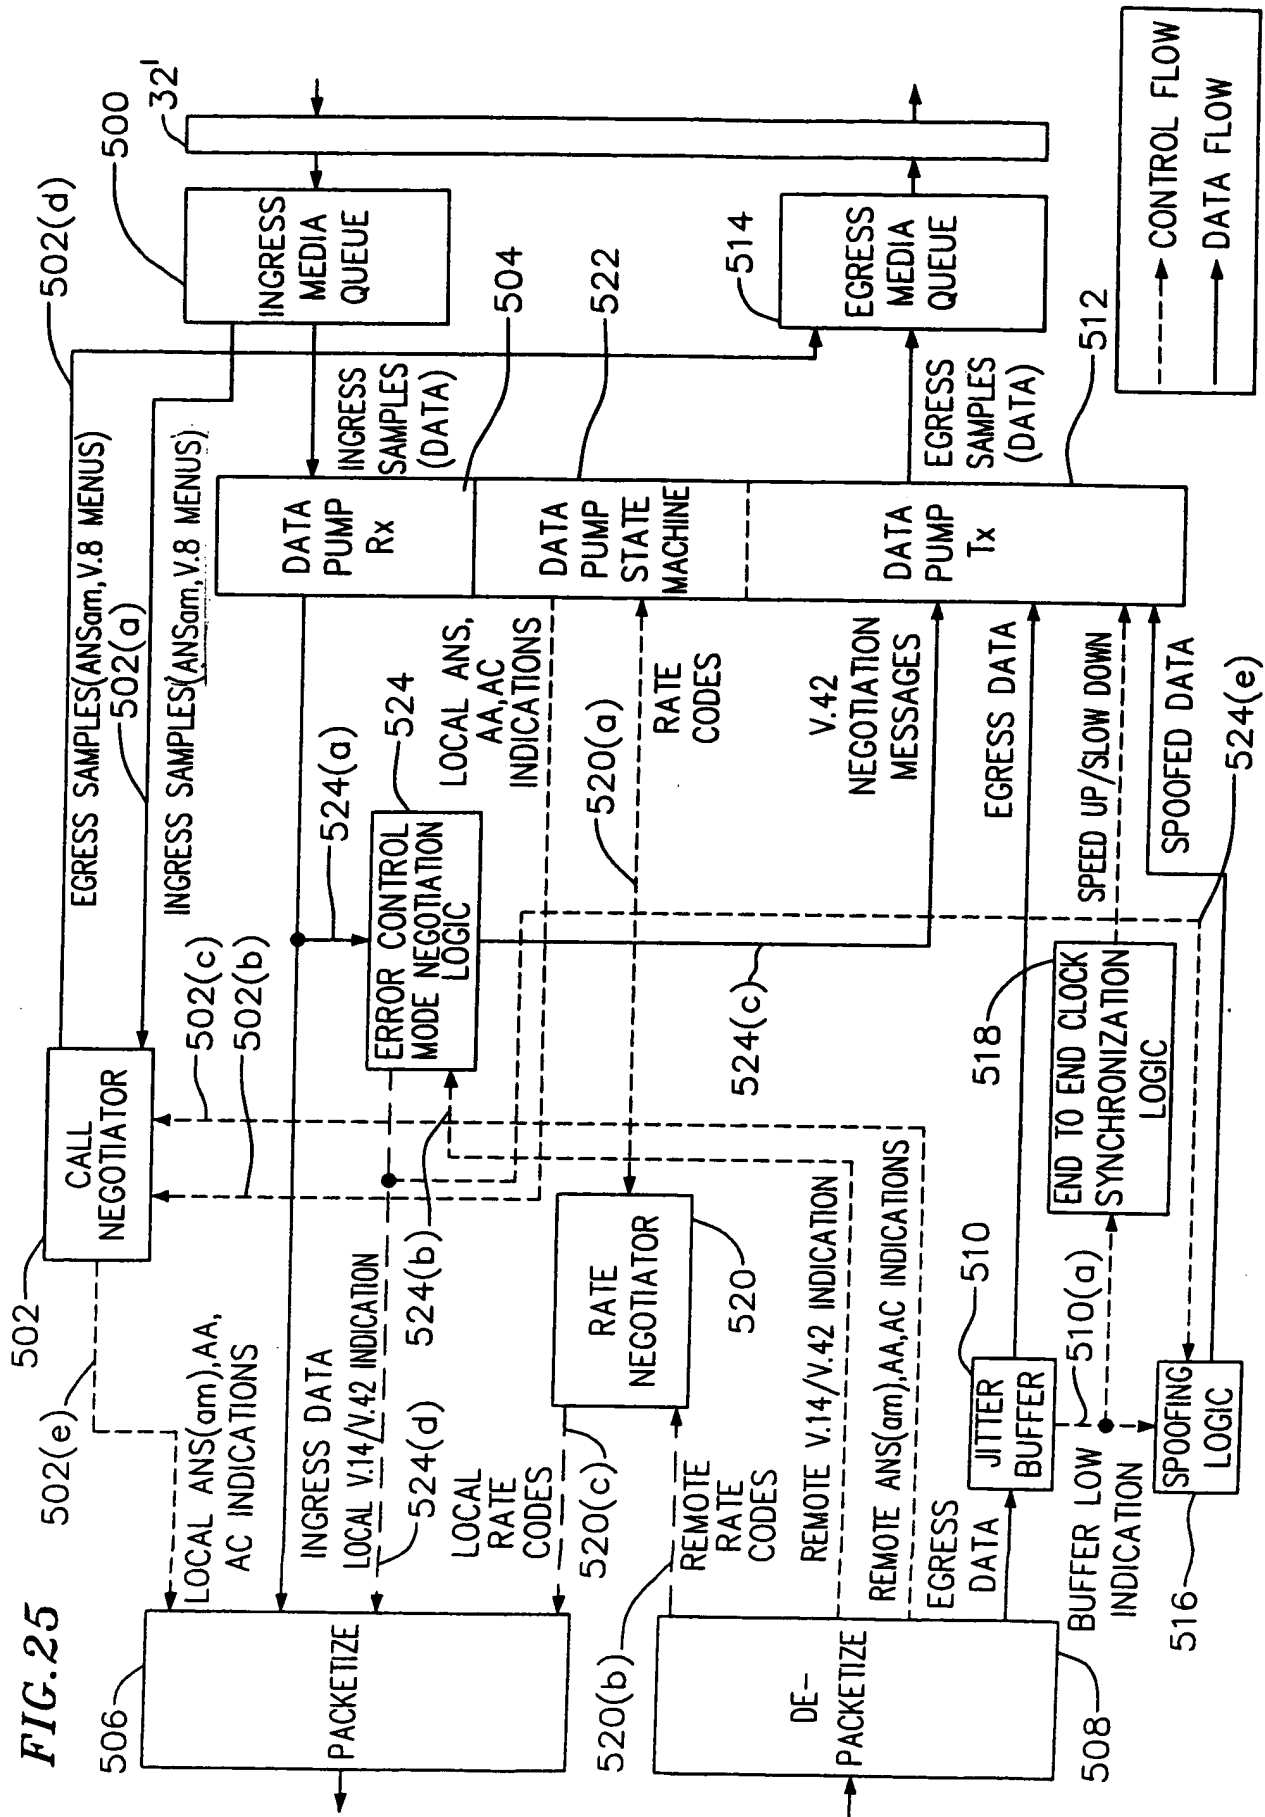 


FIG. 26

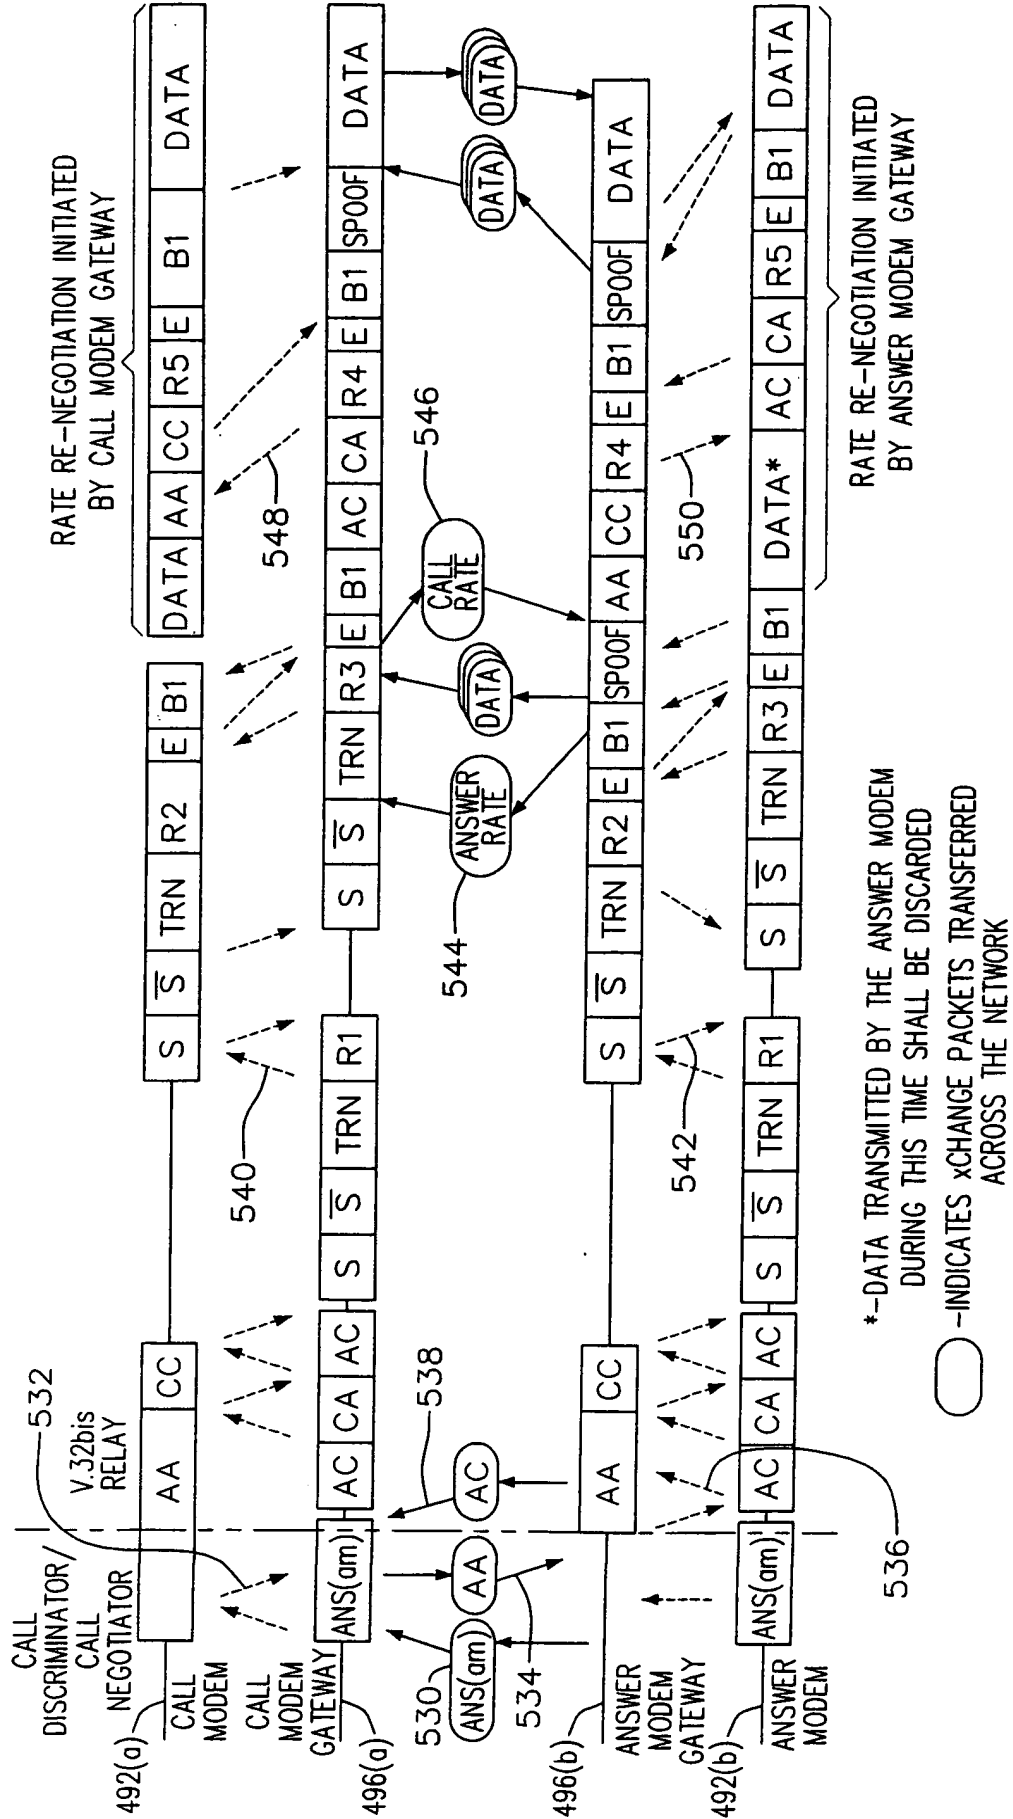 


FIG. 27

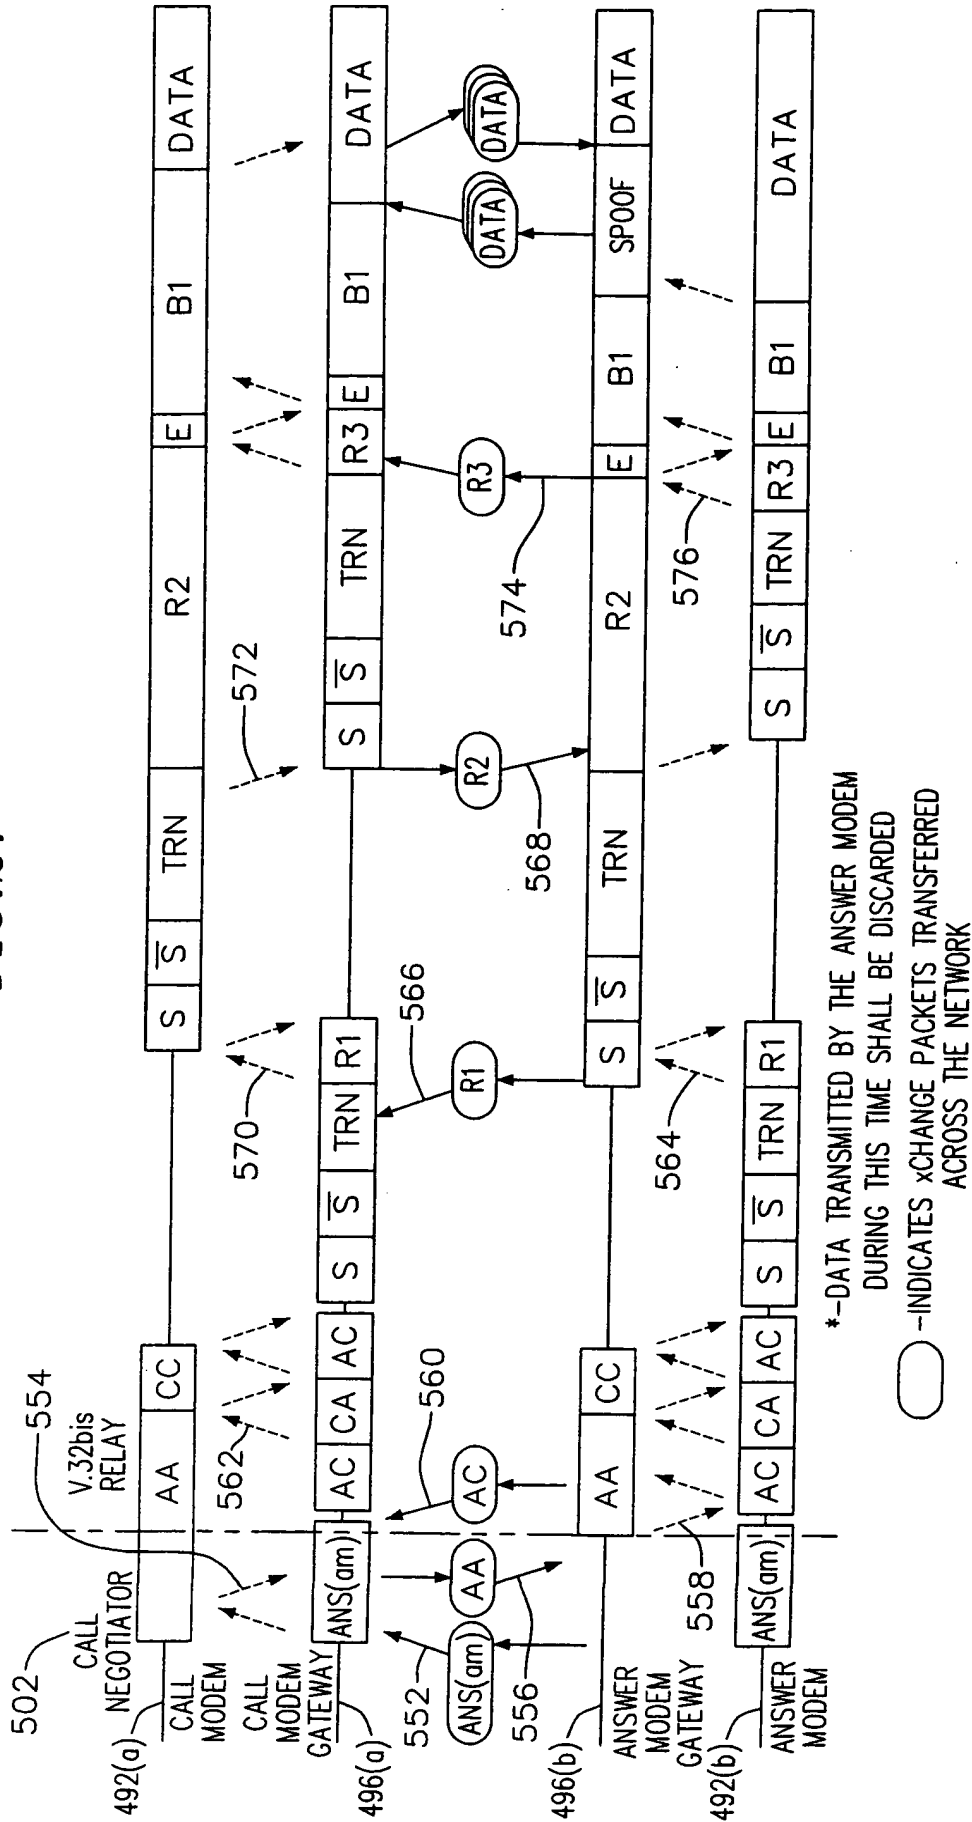 


FIG. 28

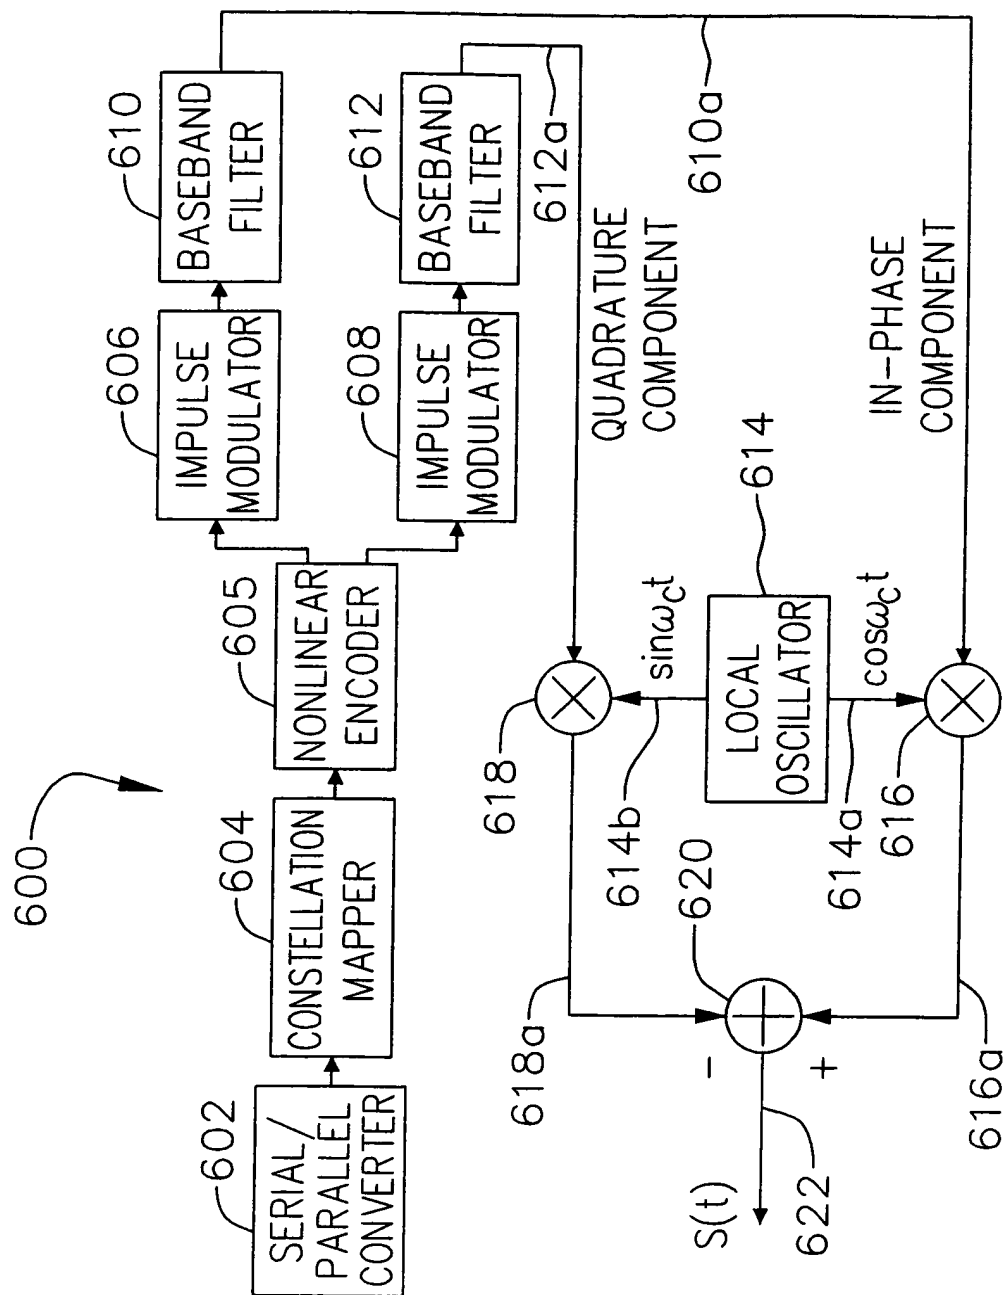 


FIG. 29

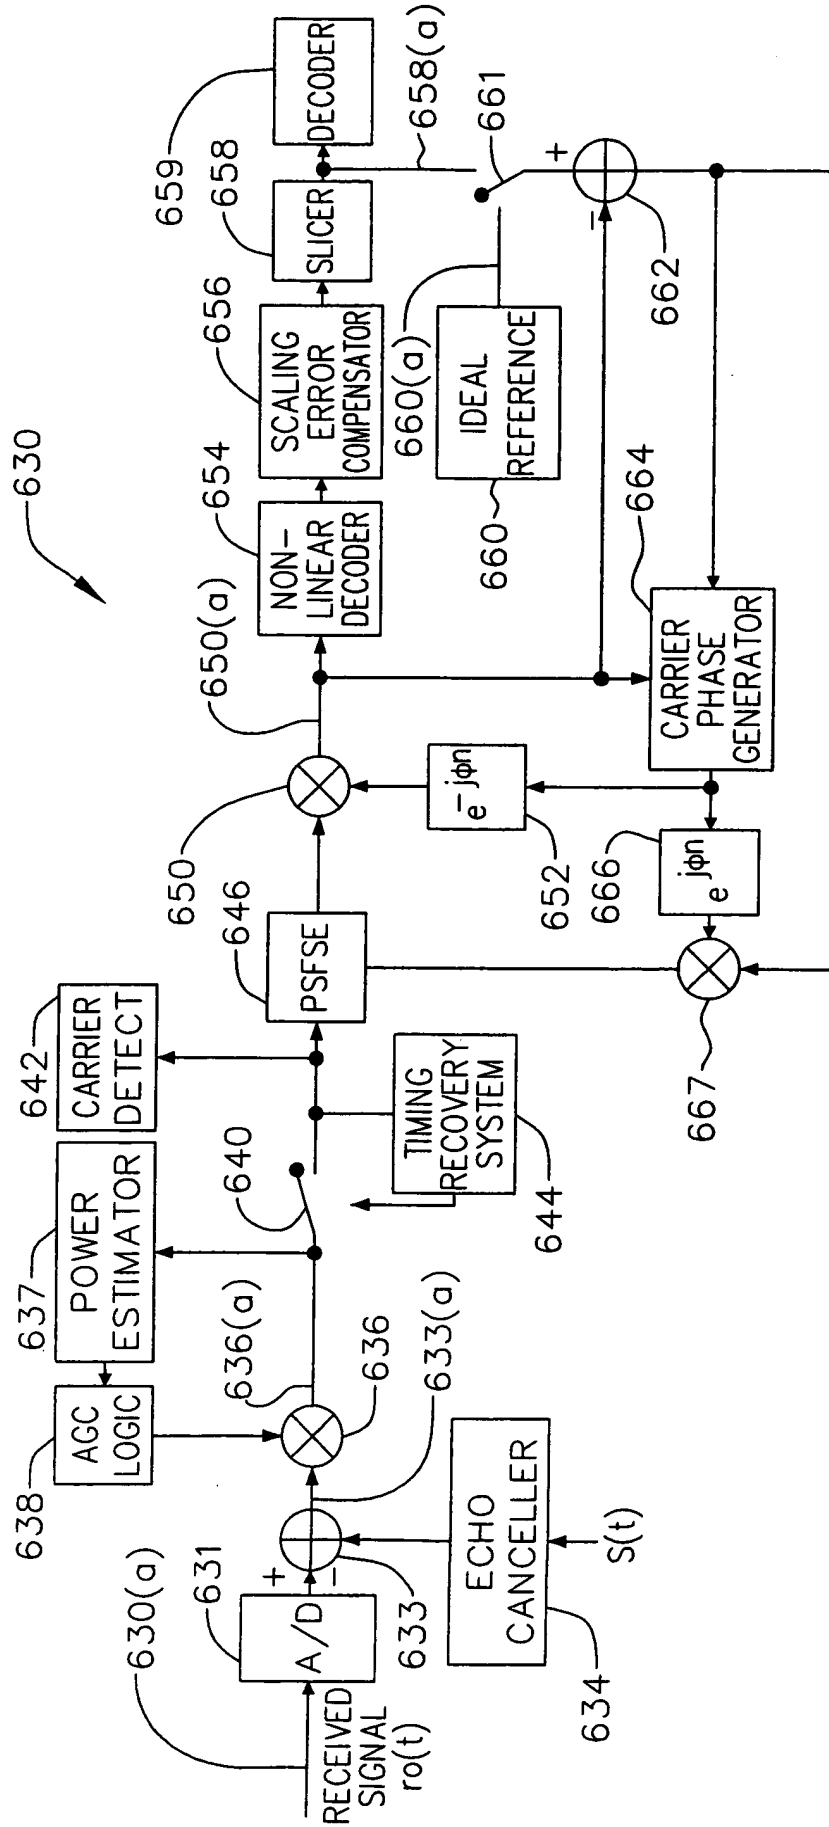 


FIG. 30


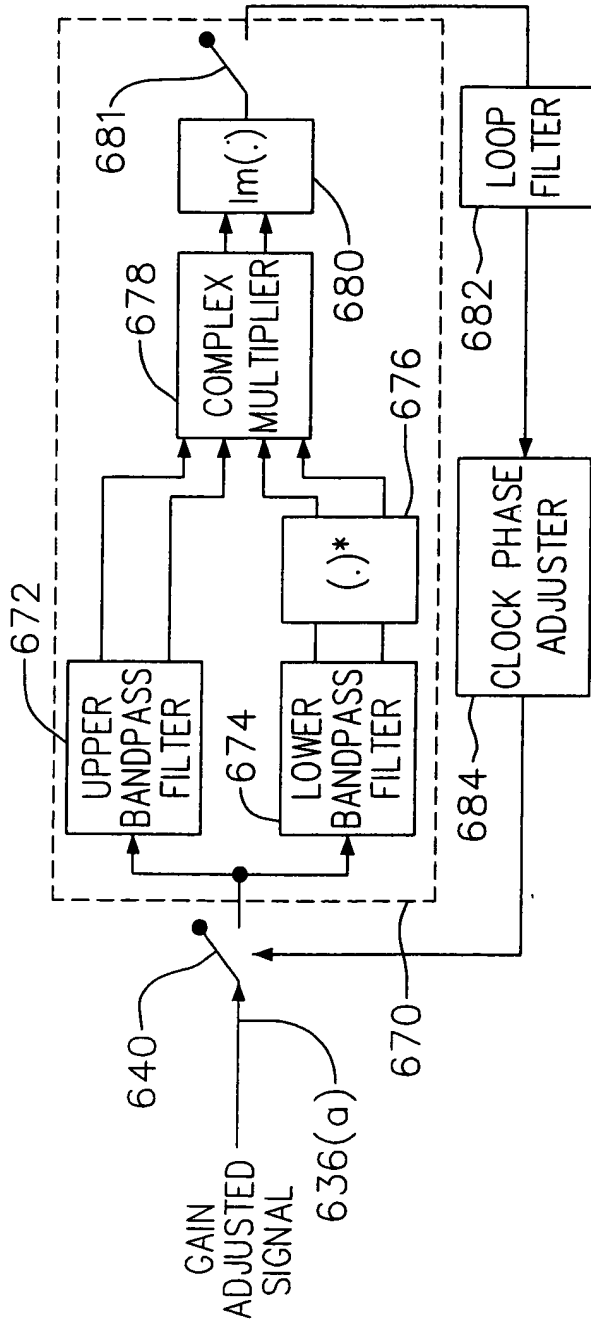 


FIG. 31

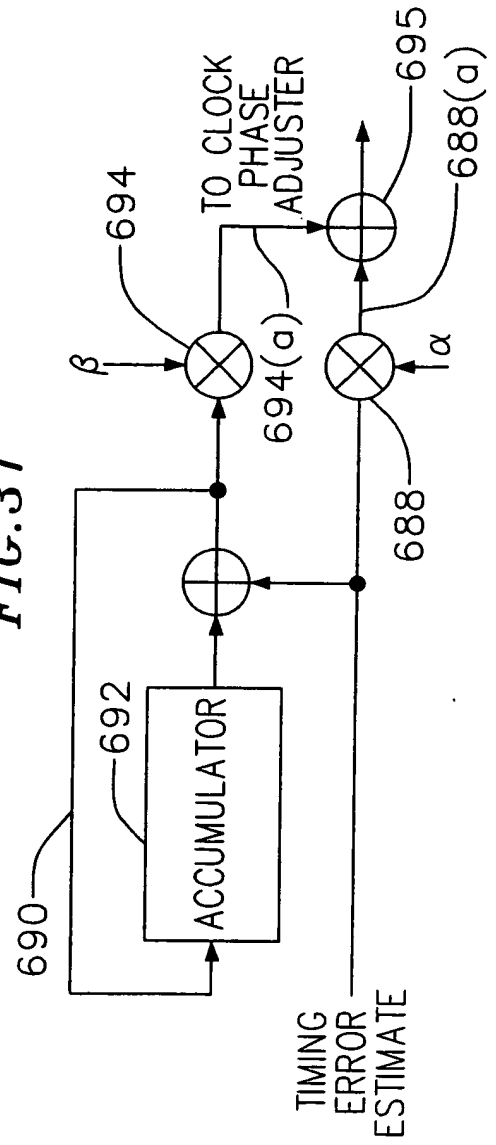 




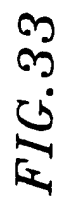 


FIG. 34

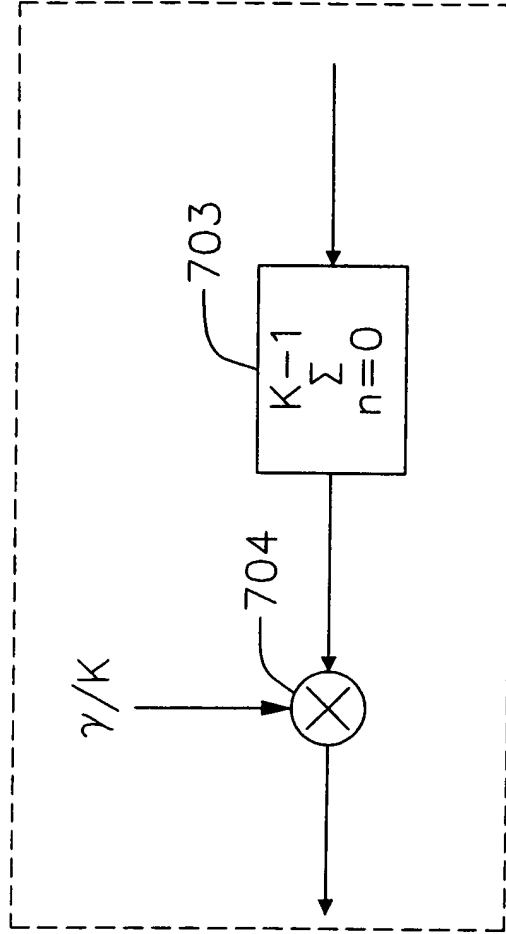 700



TIMING FREQUENCY  
OFFSET ESTIMATE

